SYSTEM SCHEMATICS

PC60-III

JANUARY, 1990

PN-314676-01



SYSTEM SCHEMATICS

PC60-III

JANUARY, 1990

PN-314676-01

Commodore Business Machines, Inc.

1200 Wilson Drive, West Chester, Pennsylvania 19380 U.S.A.

Commodore makes no express or implied warranties with regard to the information contained herein. The information is made available solely on an as is basis, and the entire risk as to completeness, reliability, and accuracy is with the user. Commodore shall not be liable for any damages in connection with the use of the information contained herein. The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty as to quality or suitability of such replacement part. Reproduction or use without express permission, of editorial or pictorial content, in any matter is prohibited.

This manual contains copyrighted and proprietary information. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of Commodore Electronics Limited.

Copyright © 1990 by Commodore Electronics Limited. All rights reserved.

TABLE OF CONTENTS

- SPECIFICATIONS
- PARTS LISTS
- SCHEMATICS

PC60-III SPECIFICATIONS

STANDARD FEATURES

MICROPROCESSOR 80386DX-25 MHz

CACHE 32KBytes 2-way set associative

MEMORY CAPACITY 2 Mbytes onboard expandable to 18 Mbytes

(via 32 bit memory cards)

VIDEO OUTPUT VGA 31.5 KHz, EVGA 35 KHz

VIDEO DISPLAY RAM 256 KByte

PARALLEL OUTPUT Centronics (IBM Compatible)

SERIAL OUTPUT RS-232 (IBM Compatible)

MOUSE PORT with Commodore 1352 mouse

Hardware and Software compatible with

Microsoft Bus Mouse

AutoConfigtm BIOS

BATTERY BACKED-UP CLOCK

EXPANSION SLOTS 9 AT Full length slots

2 with 32 bit compatible slots

DISK STORAGE (standard configuration) 80 MByte hard disk (formatted)

(AT integrated drive with embedded controller) 5.25" High Density Floppy Disk (1.2 MB) 3.5" High Density Floppy Disk (1.44 MB)

280 WATT POWER SUPPLY

OPTIONAL FEATURES

Math Coprocessor 80387-25 or Weitek 3164-25

Disk and Tape Storage

One 80 MByte hard disk inside the case. One 5.25" 1.2 MByte floppy drive and one 3.5" 1.4 MByte floppy drive, accessable from the front of the unit.

Available Expansion

Floppy Disk Bays

1 5.25" unused slot

1 3.5" unused slot

Hard Disk Bay

One full height Hard Disk bay

Expansion Slots

There are nine expansion slots. Each of these slots is capable of accepting a card measuring 333.5 mm (13.13in.) in length by 97.02 mm (3.81 in) height (excluding the connector fingers).

IBM, AT AND XT are registered trademarks of International Business Machines. AutoConfig is a registered trademark of Commodore Business Machines.

VIDEO FEATURES

Alphanumeric	Modes
---------------------	-------

Alphanumeric Modes						
	Mode#	Col x Row	Char Matrix	Resolution	Colors	Standard
	0,1	40x25	8x8	320x200	16	CGA [1]
	0,1	10/120	9x16	360x400	16 of 256k	VGA [2]
	2,3	80x25	8x8	640x200	16	CGA [1]
	2,3		9x16	720x400	16 of 256k	VGA [1]
	7	80x25	9x14	720x350	monochrome	MDA
	•		9x16	720x400	monochrome	VGA [2]
	54	132x43	7x9	924x387	color	enhanced
	55	132x25	7x16	924x400	color	enhanced
	56	132x43	7x9	924x387	monochrome	enhanced
	57	132x25	7x16	924x400	monochrome	enhanced
	Graphics Modes	,				
	4,5			320x200	4	CGA [1]
					4 of 256k	VGA [1]&[2]
	6			640x200	2	CGA
					2 of 256k	VGA [1]&[2]
	D			320x200	16 of 256k	VGA [1]
	E			640x200	16 of 256k	VGA [1]
	F			640x350	monochrome	VGA
	10			640x350	16 of 256k	VGA/MCGA
	11			640x480	2 of 256k	VGA
	12			640x480	16 of 256k	VGA
	13			320x200	256 of 256k	VGA/MCGA[1]
	58			800x600	16 of 256k	EVGA
	59			800x600	2	EVGA
	60			640x400	256 of 256k	EVGA

NOTES:

- [1] All 200 line modes are double scanned for 400 line resolution.
- [2] The VGA implementation of these modes is the default.
- [3] The interface to the VGA RAM/ROM is 16 bits wide.

Video Signals

_				
Vertical Resolution	Horizontal Frequency	Sync Polarity	Vertical Sync Frequency	Sync Polarity
350 lines	31.5 KHz	+	70.1 Hz	_
400 lines	31.5 KHz	_	70.1 Hz	+
480 lines	31.5 KHz	_	59.9 Hz	_
600 lines*	35.2 HHz	_	56.2 Hz	_

^{*}Requires an Analog MultiSync compatible monitor.

Block Memory Map

Standard Memory

640 KBytes from 0 to 655360 decimal (0hto 9FFFFh). The 384K from the 640K to 1 MByte boundary can be allocated as Shadow RAM for the BIOS/VGA BIOS ROM. The 1MByte above the 1MByte boundary is configured as extended RAM.

Keyboard Features

Standard

United States ASCII 101 International 102 Key

Optional

Dvorak

Special keyboards and drivers are available (via DOS 4.01) to customize the keyboard for the following countries: Germany, Spain, France, Italy and the United Kingdom.

Additional Features:

numeric keypad

4 cursor keys in an inverted "T" formation

Other Features

Security lock for keyboard lockout, and front panel reset in addition to rear panel reset

Built in speaker

External configuration switches

Battery Backed-up Real-Time Clock/Calendar

Physical Specifications

 Height
 24"

 Depth
 17.5"

 Width
 7"

 Weight
 35 lbs.

Minimum Clearances

Right Side 4" 10.2 cm Back Side 4" 10.2 cm

Regulatory Approvals

Standard Description

USA/Canada

UL478 Electronic Data Processing Units and Systems

FCC FCC Class B, Part 15 Subpart J

CSA 22.2 Data Processing Equipment, Consumer and Commercial Products.

Europe

VDE IEC 435

Commodore International Spare Parts List SHIPPING ASSEMBLIES

526004-01	SHIPPING ASSY PC60-III (U.S.A.) 80MB HDD	526004-05	SHIPPING ASSY PC60-III (CANADA) 40MB HDD
	BOX, PACKING	363280-01	BOX, PACKING
318241-01	SPACER, CARDBOARD		SPACER, CARDBOARD
320408-01	RAG FLAT 812.8 X 1066.8 CPU	320408-01	BAG, FLAT 812.8 X 1066.8 CPU
318984-01			SUPPORT, FOAM - CPU CORNER
318240-01		318240-01	SPACER, STYROFOAM
318170-01	CARD, READ THIS FIRST	318170-01	CARD, READ THIS FIRST
903508-15	CORD, POWER, SHIELDED (U.S.)	903508-04	CORD, POWER (CANADA)
313328-02	MAIN ASSY (CSA,UL) 80 MB HDD	313328-04	MAIN ASSY (CSA,UL) 40 MB HDD
	BAG, PLASTIC (KEYS)	251006-01	BAG, PLASTIC (KEYS)
363267-01	MANUAL, USER/DOS 4.01 (ENGLISH)	363267-01	MANUAL, USER/DOS 4.01 (ENGLISH)
319292-01	MANUAL, BASIC 3.22 (ENGLISH)	319292-01	MANUAL, BASIC 3.22 (ENGLISH)
315961-01	SOFTWARE SUB ASSY (U.S.)	315961-02	SOFTWARE SUB ASSY (CANADA)
316787-01	LABEL, UPC	316787-01	LABEL, UPC
324527-01	BAG, DRYING AGENT	324527-01	BAG, DRYING AGENT
312709-01	KEYBOARD (U.S./CANADA)	312709-01	KEYBOARD (U.S./CANADA)
526004-02	SHIPPING ASSY PC60-III (CANADA) 80MB HDD		SHIPPING ASSY PC60-III (AUSTRALIA) 40MB HDD
363280-01	BOX, PACKING	363280-01	BOX, PACKING
318241-01	SPACER, CARDBOARD	318241-01	SPACER, CARDBOARD
320408-01	BAG, FLAT 812.8 X 1066.8 CPU	320408-01	BAG, FLAT 812.8 X 1066.8 CPU
318984-01	SUPPORT, FOAM - CPU CORNER	318984-01	SUPPORT, FOAM - CPU CORNER
318240-01	SPACER, STYROFOAM	318240-01	SPACER, STYROFOAM
318170-01	CARD, READ THIS FIRST	318170-01	CARD, READ THIS FIRST
903508-04	CORD, POWER (CANADA)	903508-03	CORD, POWER (AUSTRALIA)
313328-02	MAIN ASSY (CSA,UL) 80 MB HDD	313328-03	MAIN ASSY (VDE,BSI,SEV & SAA) 40 MB HDD
251006-01	BAG, PLASTIC (KEYS)	251006-01	BAG, PLASTIC (KEYS)
363267-01	MANUAL, USER/DOS 4.01 (ENGLISH)	363267-01	MANUAL, USER/DOS 4.01 (ENGLISH)
319292-01	MANUAL, BASIC 3.22 (ENGLISH)	319292-01	MANUAL, BASIC 3.22 (ENGLISH)
315961-02	SOFTWARE SUB ASSY (CANADA)	315961-03	SOFTWARE SUB ASSY (AUSTRALIA)
316787-01	LABEL, UPC	316787-01	LABEL, UPC
324527-01	BAG, DRYING AGENT		BAG, DRYING AGENT
312709-01	KEYBOARD (U.S./CANADA)		KEYBOARD (AUSTRALIA)
526004-03	SHIPPING ASSY PC60-III (AUSTRALIA) 80MB HDD		SHIPPING ASSY PC60-III (U.S.A.) NO HDD
363280-01	BOX, PACKING	363280-01	BOX, PACKING
318241-01	SPACER, CARDBOARD	318241-01	SPACER, CARDBOARD
		1010241-01	ן טר אטבוז, טאווטטטאווט
320408-01	BAG, FLAT 812.8 X 1066.8 CPU	320408-01	
		320408-01	BAG, FLAT 812.8 X 1066.8 CPU
318984-01	SUPPORT, FOAM - CPU CORNER	320408-01 318984-01	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER
318984-01 318240-01	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM	320408-01 318984-01 318240-01	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM
318984-01 318240-01 318170-01	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST	320408-01 318984-01 318240-01 318170-01	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST
318984-01 318240-01	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM	320408-01 318984-01 318240-01 318170-01 903508-15	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.)
318984-01 318240-01 318170-01 903508-03	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE,BSI,SEV & SAA) 80MB HDD	320408-01 318984-01 318240-01 318170-01 903508-15	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS)
318984-01 318240-01 318170-01 903508-03 313328-01	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE, BSI,SEV & SAA) 80MB HDD BAG, PLASTIC (KEYS)	320408-01 318984-01 318240-01 318170-01 903508-15 313328-06 251006-01	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS)
318984-01 318240-01 318170-01 903508-03 313328-01 251006-01	SUPPORT, FOAM - CPU CORNER SPACER, STYROFDAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE,BSI,SEV & SAA) 80MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH)	320408-01 318984-01 318240-01 318170-01 903508-15 313328-06	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH)
318984-01 318240-01 318170-01 903508-03 313328-01 251006-01 363267-01	SUPPORT, FOAM - CPU CORNER SPACER, STYROFDAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE,BSI,SEV & SAA) 80MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH)	320408-01 318984-01 318240-01 318170-01 903508-15 313328-06 251006-01 363267-01	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH)
318984-01 318240-01 318170-01 903508-03 313328-01 251006-01 363267-01 319292-01	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE,BSI,SEV & SAA) 80MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH)	320408-01 318984-01 318240-01 318170-01 903508-15 313328-06 251006-01 363267-01 319292-01	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (U.S.)
318984-01 318240-01 318170-01 903508-03 313328-01 251006-01 363267-01 319292-01 315961-03	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE,BSI,SEV & SAA) 80MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (AUSTRALIA) LABEL, UPC	320408-01 318984-01 318240-01 318170-01 903508-15 313328-06 251006-01 363267-01 319292-01 315961-01	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (U.S.) LABEL, UPC
318984-01 318240-01 318170-01 903508-03 313328-01 251006-01 363267-01 319292-01 315961-03 316787-01 324527-01	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE,BSI,SEV & SAA) 80MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (AUSTRALIA) LABEL, UPC	320408-01 318984-01 318240-01 318170-01 903508-15 313328-06 251006-01 363267-01 319292-01 315961-01 316787-01	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (U.S.) LABEL, UPC BAG, DRYING AGENT
318984-01 318240-01 318170-01 903508-03 313328-01 251006-01 363267-01 319292-01 315961-03 316787-01 324527-01 312702-02 526004-04	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE, BSI, SEV & SAA) 80MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (AUSTRALIA) LABEL, UPC BAG, DRYING AGENT KEYBOARD (AUSTRALIA) SHIPPING ASSY PC60-III (U.S.A.) 40MB HDD	320408-01 318984-01 318240-01 318170-01 903508-15 313328-06 251006-01 363267-01 319292-01 315961-01 316787-01 324527-01 312709-01	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (U.S.) LABEL, UPC BAG, DRYING AGENT KEYBOARD (U.S./CANADA) SHIPPING ASSY PC50-III (CANADA) NO HDD
318984-01 318240-01 318170-01 903508-03 313328-01 251006-01 363267-01 319292-01 315961-03 316787-01 324527-01 312702-02 526004-04	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE,BSI,SEV & SAA) 80MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (AUSTRALIA) LABEL, UPC BAG, DRYING AGENT KEYBOARD (AUSTRALIA)	320408-01 318984-01 318240-01 318170-01 903508-15 313328-06 251006-01 363267-01 319292-01 315961-01 316787-01 324527-01 312709-01	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (U.S.) LABEL, UPC BAG, DRYING AGENT KEYBOARD (U.S./CANADA)
318984-01 318240-01 318170-01 903508-03 313328-01 251006-01 363267-01 319292-01 315961-03 316787-01 324527-01 312702-02 526004-04 363280-01 318241-01	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE, BSI, SEV & SAA) 80MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (AUSTRALIA) LABEL, UPC BAG, DRYING AGENT KEYBOARD (AUSTRALIA) SHIPPING ASSY PC60-III (U.S.A.) 40MB HDD	320408-01 318984-01 318240-01 318170-01 903508-15 313328-06 251006-01 363267-01 319292-01 315961-01 316787-01 324527-01 312709-01	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (U.S.) LABEL, UPC BAG, DRYING AGENT KEYBOARD (U.S./CANADA) SHIPPING ASSY PC50-III (CANADA) NO HDD
318984-01 318240-01 318170-01 903508-03 313328-01 251006-01 363267-01 319292-01 315961-03 316787-01 324527-01 312702-02 526004-04 363280-01	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE, BSI, SEV & SAA) 80MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (AUSTRALIA) LABEL, UPC BAG, DRYING AGENT KEYBOARD (AUSTRALIA) SHIPPING ASSY PC60-III (U.S.A.) 40MB HDD BOX, PACKING	320408-01 318984-01 318240-01 318170-01 903508-15 313328-06 251006-01 363267-01 319292-01 315787-01 324527-01 312709-01 526004-08 363280-01	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL.) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (U.S.) LABEL, UPC BAG, DRYING AGENT KEYBOARD (U.S./CANADA) SHIPPING ASSY PC60-III (CANADA) NO HDD BOX, PACKING SPACER, CARDBOARD
318984-01 318240-01 318170-01 903508-03 313328-01 251006-01 363267-01 319292-01 315961-03 316787-01 324527-01 312702-02 526004-04 363280-01 318241-01 320408-01 318984-01	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE, BSI, SEV & SAA) 80MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (AUSTRALIA) LABEL, UPC BAG, DRYING AGENT KEYBOARD (AUSTRALIA) SHIPPING ASSY PC60-III (U.S.A.) 40MB HDD BOX, PACKING SPACER, CARDBOARD	320408-01 318984-01 318240-01 318170-01 903508-15 313328-06 251006-01 363267-01 319292-01 315961-01 316787-01 324527-01 312709-01 526004-08	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL.) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (U.S.) LABEL, UPC BAG, DRYING AGENT KEYBOARD (U.S./CANADA) SHIPPING ASSY PC60-III (CANADA) NO HDD BOX, PACKING SPACER, CARDBOARD BAG, FLAT 812.8 X 1066.8 CPU
318984-01 318240-01 318170-01 903508-03 313328-01 251006-01 363267-01 319292-01 315961-03 316787-01 324527-01 312702-02 526004-04 363280-01 318241-01 318984-01 318984-01	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE,BSI.SEV & SAA) 80MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (AUSTRALIA) LABEL, UPC BAG, DRYING AGENT KEYBOARD (AUSTRALIA) SHIPPING ASSY PC60-III (U.S.A.) 40MB HDD BOX, PACKING SPACER, CARDBOARD BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM	320408-01 318984-01 318240-01 318170-01 903508-15 313328-06 251006-01 363267-01 319292-01 315961-01 324527-01 312709-01 526004-08 363280-01 318241-01 320408-01	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (U.S.) LABEL, UPC BAG, DRYING AGENT KEYBOARD (U.S./CANADA) SHIPPING ASSY PC60-III (CANADA) NO HDD BOX, PACKING SPACER, CARDBOARD BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER
318984-01 318240-01 318170-01 903508-03 313328-01 251006-01 315292-01 315961-03 316787-01 324527-01 312702-02 526004-04 363280-01 318241-01 320408-01 318240-01 318170-01	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE,BSI,SEV & SAA) 80MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (AUSTRALIA) LABEL, UPC BAG, DRYING AGENT KEYBOARD (AUSTRALIA) SHIPPING ASSY PC60-III (U.S.A.) 40MB HDD BOX, PACKING SPACER, CARDBOARD BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER	320408-01 318984-01 318240-01 318170-01 903508-15 313328-06 251006-01 363267-01 319292-01 315961-01 316787-01 324527-01 324527-01 526004-08 363280-01 318241-01 320408-01 318984-01	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (U.S.) LABEL, UPC BAG, DRYING AGENT KEYBOARD (U.S./CANADA) SHIPPING ASSY PC50-III (CANADA) NO HDD BOX, PACKING SPACER, CARDBOARD BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM
318984-01 318240-01 318170-01 903508-03 313328-01 251006-01 363267-01 319292-01 315961-03 316787-01 324527-01 312702-02 526004-04 363280-01 318241-01 320408-01 318984-01 318170-01 903508-15	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE, BSI, SEV & SAA) 80MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (AUSTRALIA) LABEL, UPC BAG, DRYING AGENT KEYBOARD (AUSTRALIA) SHIPPING ASSY PC60-III (U.S.A.) 40MB HDD BOX, PACKING SPACER, CARDBOARD BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.)	320408-01 318984-01 318240-01 318170-01 903508-15 313328-06 251006-01 363267-01 319292-01 315961-01 316787-01 324527-01 324527-01 312709-01 526004-08 363280-01 318241-01 318984-01 318984-01	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (U.S.) LABEL, UPC BAG, DRYING AGENT KEYBOARD (U.S./CANADA) SHIPPING ASSY PC60-III (CANADA) NO HDD BOX, PACKING SPACER, CARDGOARD BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST
318984-01 318240-01 318170-01 903508-03 313328-01 251006-01 363267-01 315961-03 316787-01 312702-02 526004-04 363280-01 318241-01 320408-01 318240-01 318240-01 318170-01 903508-15 313328-04	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE, BSI,SEV & SAA) 80MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (AUSTRALIA) LABEL, UPC BAG, DRYING AGENT KEYBOARD (AUSTRALIA) SHIPPING ASSY PC60-III (U.S.A.) 40MB HDD BOX, PACKING SPACER, CARDBOARD BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST	320408-01 318984-01 318240-01 318170-01 903508-15 313328-06 251006-01 363267-01 315961-01 316787-01 324527-01 312709-01 526004-08 363280-01 318241-01 320408-01 318984-01 318240-01 318170-01	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (U.S.) LABEL, UPC BAG, DRYING AGENT KEYBOARD (U.S./CANADA) SHIPPING ASSY PC50-III (CANADA) NO HDD BOX, PACKING SPACER, CARDBOARD BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (CANADA)
318984-01 318240-01 318170-01 903508-03 313328-01 251006-01 363267-01 319292-01 315961-03 316787-01 324527-01 312702-02 526004-04 363280-01 318241-01 320408-01 318984-01 318170-01 903508-15	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE,BSI,SEV & SAA) 80MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (AUSTRALIA) LABEL, UPC BAG, DRYING AGENT KEYBOARD (AUSTRALIA) SHIPPING ASSY PC60-III (U.S.A.) 40MB HDD BOX, PACKING SPACER, CARDBOARD BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) 40 MB HDD BAG, PLASTIC (KEYS)	320408-01 318984-01 318240-01 318170-01 903508-15 313328-06 251006-01 363267-01 319292-01 315961-01 316787-01 324527-01 312709-01 526004-08 363280-01 318241-01 318340-01 318170-01 903508-04 313328-06	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (U.S.) LABEL, UPC BAG, DRYING AGENT KEYBOARD (U.S./CANADA) SHIPPING ASSY PC50-III (CANADA) NO HDD BOX, PACKING SPACER, CARDBOARD BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (CANADA) MAIN ASSY (CSA,UL) NO HDD
318984-01 318240-01 318170-01 903508-03 313328-01 251006-01 363267-01 315961-03 316787-01 312702-02 526004-04 363280-01 318241-01 320408-01 318240-01 318240-01 318170-01 903508-15 313328-04	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE,BSI,SEV & SAA) 80MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (AUSTRALIA) LABEL, UPC BAG, DRYING AGENT KEYBOARD (AUSTRALIA) SHIPPING ASSY PC60-III (U.S.A.) 40MB HDD BOX, PACKING SPACER, CARDBOARD BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) 40 MB HDD BAG, PLASTIC (KEYS)	320408-01 318984-01 318240-01 318170-01 903508-15 313328-06 251006-01 363267-01 319292-01 315961-01 316787-01 312709-01 526004-08 363280-01 318241-01 320408-01 318240-01 318170-01 903508-04 313328-06 251006-01	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL.) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (U.S.) LABEL, UPC BAG, DRYING AGENT KEYBOARD (U.S./CANADA) SHIPPING ASSY PC60-III (CANADA) NO HDD BOX, PACKING SPACER, CARDGOARD BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (CANADA) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS)
318984-01 318240-01 318170-01 903508-03 313328-01 251006-01 363267-01 319292-01 315961-03 316787-01 312702-02 526004-04 363280-01 318241-01 320408-01 318240-01 31870-01 31870-01 903508-15 313328-04 251006-01	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE, BSI,SEV & SAA) 80MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (AUSTRALIA) LABEL, UPC BAG, DRYING AGENT KEYBOARD (AUSTRALIA) SHIPPING ASSY PC60-III (U.S.A.) 40MB HDD BOX, PACKING SPACER, CARDBOARD BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) 40 MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, USER/DOS 4.01 (ENGLISH)	320408-01 318984-01 318240-01 318170-01 903508-15 313328-06 251006-01 363267-01 315961-01 316787-01 324527-01 312709-01 526004-08 363280-01 318241-01 318240-01 318170-01 903508-04 251006-01 363267-01	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (U.S.) LABEL, UPC BAG, DRYING AGENT KEYBOARD (U.S./CANADA) SHIPPING ASSY PC60-III (CANADA) NO HDD BOX, PACKING SPACER, CARDBOARD BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (CANADA) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH)
318984-01 318240-01 318170-01 903508-03 313328-01 251006-01 363267-01 319292-01 315961-03 316787-01 312702-02 526004-04 363280-01 318241-01 320408-01 318240-01 318240-01 318170-01 903508-15 313328-04 251006-01 363267-01	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE, BSI,SEV & SAA) 80MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (AUSTRALIA) LABEL, UPC BAG, DRYING AGENT KEYBOARD (AUSTRALIA) SHIPPING ASSY PC60-III (U.S.A.) 40MB HDD BOX, PACKING SPACER, CARDBOARD BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) 40 MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, USER/DOS 4.01 (ENGLISH)	320408-01 318984-01 318240-01 318170-01 903508-15 313328-06 251006-01 363267-01 315961-01 315961-01 316787-01 324527-01 312709-01 526004-08 363280-01 318241-01 320408-01 318240-01 318240-01 318240-01 318328-06 251006-01 363267-01 319292-01	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (U.S.) LABEL, UPC BAG, DRYING AGENT KEYBOARD (U.S./CANADA) SHIPPING ASSY PC60-III (CANADA) NO HDD BOX, PACKING SPACER, CARDGOARD BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (CANADA) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, USER/DOS 4.01 (ENGLISH)
318984-01 318240-01 318170-01 903508-03 313328-01 251006-01 315292-01 315961-03 316787-01 324527-01 312702-02 526004-04 363280-01 318241-01 320408-01 318240-01 318240-01 318170-01 903508-15 313328-04 251006-01 319292-01	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE,BSI,SEV & SAA) 80MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MONUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (AUSTRALIA) LABEL, UPC BAG, DRYING AGENT KEYBOARD (AUSTRALIA) SHIPPING ASSY PC60-III (U.S.A.) 40MB HDD BOX, PACKING SPACER, CARDBOARD BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) 40 MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH)	320408-01 318984-01 318240-01 318170-01 903508-15 313328-06 251006-01 315292-01 3152961-01 316787-01 324527-01 312709-01 526004-08 363280-01 318241-01 320408-01 318240-01 318384-01 31828-06 251006-01 313228-06 251006-01 315292-01 3152961-02	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (U.S.) LABEL, UPC BAG, DRYING AGENT KEYBOARD (U.S./CANADA) SHIPPING ASSY PC50-III (CANADA) NO HDD BOX, PACKING SPACER, CARDGOARD BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (CANADA) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (CANADA)
318984-01 318240-01 318170-01 903508-03 313328-01 251006-01 319292-01 315961-03 316787-01 324527-01 312702-02 526004-04 363280-01 318241-01 320408-01 318240-01 318240-01 318240-01 318240-01 318240-01 318240-01 318267-01 319292-01	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE, BSI, SEV & SAA) 80MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (AUSTRALIA) LABEL, UPC BAG, DRYING AGENT KEYBOARD (AUSTRALIA) SHIPPING ASSY PC60-III (U.S.A.) 40MB HDD BOX, PACKING SPACER, CARDBOARD BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA, UL) 40 MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (U.S.)	320408-01 318984-01 318240-01 318170-01 903508-15 313328-06 251006-01 319292-01 315961-01 316787-01 324527-01 312709-01 526004-08 363280-01 318240-01 318984-01 318984-01 318240-01 318240-01 31870-01 903508-04 313328-06 251006-01 319292-01 315961-02 316787-01	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (U.S.) LABEL, UPC BAG, DRYING AGENT KEYBOARD (U.S./CANADA) SHIPPING ASSY PC50-III (CANADA) NO HDD BOX, PACKING SPACER, CARDBOARD BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (CANADA) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (CANADA) LABEL, UPC
318984-01 318240-01 318170-01 903508-03 313328-01 251006-01 363267-01 319292-01 315961-03 316787-01 324527-01 312702-02 526004-04 363280-01 318241-01 320408-01 318240-01 318240-01 318240-01 318240-01 318240-01 318240-01 318240-01 318240-01 318240-01 318240-01 318240-01 318240-01 318240-01 318240-01	SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (AUSTRALIA) MAIN ASSY (VDE,BSI,SEV & SAA) 80MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (AUSTRALIA) LABEL, UPC BAG, DRYING AGENT KEYBOARD (AUSTRALIA) SHIPPING ASSY PC60-III (U.S.A.) 40MB HDD BOX, PACKING SPACER, CARDBOARD BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) 40 MB HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (U.S.) LABEL, UPC BAG, DRYING AGENT	320408-01 318984-01 318240-01 318170-01 903508-15 313328-06 251006-01 315292-01 3152961-01 316787-01 324527-01 312709-01 526004-08 363280-01 318241-01 320408-01 318240-01 318384-01 31828-06 251006-01 313228-06 251006-01 315292-01 3152961-02	BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER, SHIELDED (U.S.) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (U.S.) LABEL, UPC BAG, DRYING AGENT KEYBOARD (U.S./CANADA) SHIPPING ASSY PC60-III (CANADA) NO HDD BOX, PACKING SPACER, CARDBOARD BAG, FLAT 812.8 X 1066.8 CPU SUPPORT, FOAM - CPU CORNER SPACER, STYROFOAM CARD, READ THIS FIRST CORD, POWER (CANADA) MAIN ASSY (CSA,UL) NO HDD BAG, PLASTIC (KEYS) MANUAL, USER/DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) SOFTWARE SUB ASSY (CANADA) LABEL, UPC BAG, DRYING AGENT

Commodore International Spare Parts List SHIPPING ASSEMBLIES (Continued)

			(commuta)
	TO LIDE	Lienner	
526004-09	SHIPPING ASSY PC60-III (AUSTRALIA) NO HDD		02 SHIPPING ASSY KEYBOARI
	T	1 1 3 1 0 0 6 8	O1 DOV DACKING

525004.00	SHIPPING ASSY PC60-III (AUSTRALIA) NO HDD	526014-02	SHIPPING ASSY KEYBOARD PC60-III (GERMAN)
	BOX, PACKING	319968-01	BOX, PACKING
318241-01			SPACER
320408-01	BAG, FLAT 812.8 X 1066.8 CPU	903508-01	CORD, POWER (VDE)
318984-01	SUPPORT, FOAM - CPU CORNER	318239-01	BINDER, 3-RING
318240-01	SPACER, STYROFOAM	318238-01	HOLDER, DISKETTE 5.25, 3-RING
318170-01	CARD, READ THIS FIRST	318237-01	HOLDER, DISKETTE 3.5, 3-RING
903508-03	CORD. POWER (AUSTRALIA)	312702-03	KEYBOARD ASSY (GERMAN)
313328-05	MAIN ASSY (VDE, BSI, SEV & SAA) NO HDD	363270-01	MANUAL, DOS 4.01 (GERMAN)
251006-01	BAG, PLASTIC (KEYS)	319288-01	MANUAL, BASIC 3.22 (GERMAN)
363267-01	MANUAL, USER/DOS 4.01 (ENGLISH)	363294-01 363284-01	MANUAL, MSDOS SHELL (GERMAN)
319292-01	MANUAL, BASIC 3.22 (ENGLISH)		MANUAL, OPERATIONS GUIDE (GERMAN)
315961-03		367026-01	DISK ASSY, MSDOS 4.01 INSTALL#1 5.25 (GERMAN)
316787-01	LABEL, UPC		DISK ASSY, MSDOS 4.01 INSTALL#2 5.25 (GERMAN) DISK ASSY, MSDOS 4.01 INSTALL#3 5.25 (GERMAN)
324527-01	BAG, DRYING AGENT KEYBOARD (AUSTRALIA)		DISK ASSY, MSDOS 4.01 INSTALL#3 5.25 (GERMAN)
312702-02	RETBUAND (AUSTRACIA)		DISK ASSY, MSDOS 4.01 INSTALL#5 5.25 (GERMAN)
526006-01			DISK ASSY, MSDOS SHELL 1.01 5.25 (GERMAN)
363356-01	BOX, PACKING-CPU	317206-01	DISK ASSY PC60III UTILITIES 5.25 (GERMAN)
320408-01	BAG, FLAT 812.8 X 1066.8 MM CPU	317184-01	DISK ASSY MSDOS 4.01 INSTALL 3.5 (GERMAN)
318984-01	SUPPORT, FOAM, CORNER CPU QTY = 8	317185-01	DISK ASSY, MSDOS 4.01 OPER SYS 3.5 (GERMAN)
318240-01	SPACER, STYROFOAM	317186-01	DISK ASSY, MSDOS SHELL 1.01 3.5 (GERMAN)
313328-01	MAIN ASSY (VDE,BSI,SEV & SAA) 80MB HDD		DISK ASSY, PC60III UTILITIES 3.5 (GERMAN)
324257-01 251006-01	BAG, DRYING AGENT BAG, PLASTIC (KEYS)	526014-03	
526006-02	SHIPPING ASSY PC60-III (EUROPE) 40MB HDD		BOX, PACKING
			SPACER
363356-01	BOX, PACKING-CPU BAG, FLAT 812.8 X 1066.8 MM CPU		CORD, POWER (VDE)
320408-01 318984-01		318239-01	BINDER, 3-RING
318240-01		318238-01	HOLDER, DISKETTE 5.25, 3-RING
313328-03	MAIN ASSY (VDE,BSI,SEV & SAA) 40MB HDD	318237-01	HOLDER, DISKETTE 3.5, 3-RING
324257-01	BAG, DRYING AGENT	312/02-05	KEYBOARD ASSY (FRENCH)
251006-01	BAG, PLASTIC (KEYS)	303268-01	MANUAL, DOS 4.01 (FRENCH)
526006-03	SHIPPPING ASSY PC60-III (EUROPE) NO HDD		MANUAL, BASIC 3.22 (FRENCH)
363356-01			MANUAL, MSDOS SHELL (FRENCH)
320408-01	BOX, PACKING-CPU BAG, FLAT 812.8 X 1066.8 MM CPU		MANUAL, OPERATIONS GUIDE (FRENCH) DISK ASSY, MSDOS 4.01 INSTALL#1 5.25 (FRENCH)
318984-01	SUPPORT, FOAM, CORNER CPU QTY = 8	367037-01	DISK ASSY, MSDOS 4.01 INSTALL#1 5.25 (FRENCH)
318240-01	SPACER, STYROFOAM	367033-01	DISK ASSY, MSDOS 4.01 INSTALL#2 5.25 (FRENCH)
313328-05	MAIN ASSY (VDE,BSE,SEV & SAA) NO HDD	367034-01	DISK ASSY, MSDOS 4.01 INSTALL#4 5.25 (FRENCH)
324257-01	BAG, DRYING AGENT	367035-01	DISK ASSY, MSDOS 4.01 INSTALL#5 5.25 (FRENCH)
251006-01	BAG, PLASTIC (KEYS)	367036-01	DISK ASSY, MSDOS SHELL 1.01 5.25 (FRENCH)
526014-01	SHIPPING ASSY KEYBOARD PC60-III (U.K.)	317207-01	DISK ASSY, PC60III UTILITIES 5.25 (FRENCH)
319968-01	BOX, PACKING		DISK ASSY, MSDOS 4.01 INSTALL 3.5 (FRENCH)
318172-01	SPACER	317188-01	DISK ASSY, MSDOS 4.01 OPER SYS 3.5 (FRENCH)
903508-07	CORD, POWER (BSI)	317189-01	DISK ASSY, MSDOS SHELL 1.01 3.5 (FRENCH)
318239-01	BINDER, 3-RING	317238-01	DISK ASSY, PC60III UTILITIES 3.5 (FRENCH)
318238-01	HOLDER, DISKETTE 5.25, 3-RING	526014-04	SHIPPING ASSY KEYBOARD PC60-III (ITALY)
318237-01	HOLDER, DISKETTE 3.5, 3-RING		BOX, PACKING
312702-01	KEYBOARD ASSY (U.K.)		SPACER
363267-01	MANUAL, DOS 4.01 (ENGLISH)		CORD, POWER (VDE)
	MANUAL, BASIC 3.22 (ENGLISH)	318239-01	BINDER, 3-RING
363291-01	MANUAL, MSDOS SHELL (ENGLISH)	318238-01	HOLDER, DISKETTE 5.25, 3-RING
363281-01	MANUAL, OPERATIONS GUIDE (ENGLISH)		HOLDER, DISKETTE 3.5, 3-RING
317882-01	DISK ASSY, MSDOS 4 01 INSTALL 5.25 (ENGLISH)		KEYBOARD ASSY (ITALIAN)
317883-01	DISK ASSY, MSDOS 4.01 SELECT 5.25 (ENGLISH)	363269-01	MANUAL, DOS 4.01 (ITALIÁN)
317884-01	DISK ASSY, MSDOS 4.01 OPER SYS1 5.25 (ENGLISH)		MANUAL, BASIC 3.22 (ITALIAN)
317885-01	DISK ASSY, MSDOS 4.01 OPER SYS2 5.25 (ENGLISH)	363293-01	MANUAL, MSDOS SHELL (ITALIAN)
317886-01	DISK ASSY, MSDOS 4.01 OPER SYS3 5.25 (ENGLISH)		MANUAL, OPERATIONS GUIDE (ITALIAN)
317887-01	DISK ASSY, MSDOS SHELL 1.01 5.25 (ENGLISH)		DISK ASSY, MSDOS INSTALL#1 5.25 (ITALIAN)
317174-01	DISK ASSY, PC60III UTILITIES 5.25 (ENGLISH)		DISK ASSY, MSDOS INSTALL#2 5.25 (ITALIAN)
317181-01 317182-01	DISK ASSY, MSDOS 4.01 INSTALL 3.5 (ENGLISH)	317890-01	DISK ASSY, MSDOS INSTALL#3 5.25 (ITALIAN)
317183-01	DISK ASSY, MSDOS 4.01 OPER SYS 3.5 (ENGLISH)	317891-01	DISK ASSY, MSDOS INSTALL#4 5.25 (ITALIAN)
317218-01	DISKETTE ASSY, MSDOS 4.01 SHELL 1.01 3.5 (ENGLISH) DISKETTE ASSY, PC60III UTILITIES 3.5 (ENGLISH)	317892-01	DISK ASSY, MSDOS INSTALL#5 5.25 (ITALIAN) DISK ASSY, MSDOS SHELL 1.01 5.25 (ITALIAN)
10.01	SIGNETTE AGGT, FORMIN OTHERIES 3.5 (ENGLISH)	367037-01	DISK ASSY, MISDOS SHELL T.UT 5.25 (ITALIAN)
1		317208-01	DISK ASSY, MSDOS 4.01 INSTALL 3.5 (ITALIAN)
1		317191-01	DISK ASSY, MSDOS 4.01 OPER SYS 3.5 (ITALIAN)
		317192-01	DISK ASSY, MSDOS SHELL 1.01 3.5 (ITALIAN)
		317239-01	DISK ASSY, PC60III UTILITIES 3.5 (ITALIAN)
l .		31/239-01	DISK ASST, FUGUIII UTILITIES 3.3 (ITALIAIV)

Commodore International Spare Parts List SHIPPING ASSEMBLIES (Continued)

526014-05	SHIPPING ASSY KEYBOARD PC60-III (SPAIN)	526014-08	The state of the s
	BOX, PACKING	319968-01	BOX, PACKING
	SPACER	318172-01	
	CORD, POWER (VDE)	903508-02	
318239-01	BINDER, 3-RING	318239-01	BINDER, 3-RING
318238-01	HOLDER, DISKETTE 5.25, 3-RING	318238-01	
318237-01	HOLDER, DISKETTE 3.5, 3-RING	312702-04	HOLDER, DISKETTE 3.5, 3-RING
312702-06	KEYBOARD ASSY (SPANISH)	363269-01	
363271-01	MANUAL, DOS 4.01 (SPANISH)	319290-01	
319291-01	MANUAL BASIC 3.22 (SPANISH)	363293-01	
363295-01	MANUAL, MSDOS SHELL (SPANISH) MANUAL, OPERATIONS GUIDE (SPANISH)	363283-01	MANUAL, OPERATIONS GUIDE (ITALIAN)
363285-01	DISK ASSY, MSDOS 4.01 INSTALL#1 5.25 (SPANISH)	317888-01	DISK ASSY, MSDOS INSTALL#1 5.25 (ITALIAN)
317871-01 317872-01	DISK ASSY, MSDOS 4.01 INSTALL#2 5.25 (SPANISH)	317889-01	DISK ASSY, MSDOS INSTALL#2 5.25 (ITALIAN)
317873-01	DISK ASSY, MSDOS 4.01 INSTALL#3 5.25 (SPANISH)	317890-01	DISK ASSY, MSDOS INSTALL#3 5.25 (ITALIAN)
317874-01	DISK ASSY, MSDOS 4.01 INSTALL#4 5.25 (SPANISH)	317891-01	DISK ASSY, MSDOS INSTALL#4 5.25 (ITALIAN)
317875-01	DISK ASSY, MSDOS 4.01 INSTALL#5 5.25 (SPANISH)	317892-01	DISK ASSY, MSDOS INSTALL#5 5.25 (ITALIAN)
317876-01	DISK ASSY, MSDOS SHELL 1.01 5.25 (SPANISH)	367037-01	DISK ASSY, MSDOS SHELL 1.01 5.25 (ITALIAN)
317209-01	DISK ASSY, PC60III UTILITIES 5.25 (SPANISH)	317208-01	DISK ASSY, PC60III UTILITIES 5.25 (ITALIAN)
317193-01	DISK ASSY, MSDOS 4.01 INSTALL 3.5 (SPANISH)	317190-01	DISK ASSY, MSDOS 4.01 INSTALL 3.5 (ITALIAN)
317194-01	DISK ASSY, MSDOS 4.01 OPER SYS 3.5 (SPANISH)	317191-01	DISK ASSY, MSDOS 4.01 OPER SYS 3.5 (ITALIAN)
317195-01	DISK ASSY, MSDOS SHELL 1.01 3.5 (SPANISH)	317192-01	
317233-01	DISK ASSY, PC60III UTILITIES 3.5 (SPANISH)	317239-01	DISK ASSY, PC60III UTILITIES 3.5 (ITALIAN)
526014-06	SHIPPING ASSY KEYBOARD PC60-III (SWISS-GERMAN)	526014-09	
319968-01	BOX, PACKING	319968-01	
318172-01	SPACER	318172-01	SPACER
903508-02	CORD, POWER (SEV)	903508-01	CORD, POWER (VDE)
318239-01	BINDER, 3-RING	318239-01	BINDER, 3-RING
318238-01	HOLDER, DISKETTE 5.25, 3-RING	318238-01 318237-01	HOLDER, DISKETTE 5.25, 3-RING
318237-01	HOLDER, DISKETTE 3.5, 3-RING KEYBOARD ASSY (SWISS-GERMAN)	312702-10	HOLDER, DISKETTE 3.5, 3-RING KEYBOARD ASSY (SWEDEN)
312702-07 363270-01	MANUAL, DOS 4.01 (GERMAN)	319292-01	MANUAL, BASIC 3.22 (ENGLISH)
319288-01	MANUAL, BASIC 3.22 (GERMAN)	363273-01	MANUAL, DOS 4.01 (SWEDISH)
363294-01	MANUAL, MSDOS SHELL (GERMAN)	363297-01	
363284-01	MANUAL, OPERATIONS GUIDE (GERMAN)	363290-01	MANUAL, OPERATIONS GUIDE (SWEDISH)
367025-01	DISK ASSY, MSDOS 4.01 INSTALL#1 5.25 (GERMAN)	317168-01	
367026-01	DISK ASSY, MSDOS 4.01 INSTALL#2 5.25 (GERMAN)	317169-01	
367027-01	DISK ASSY, MSDOS 4.01 INSTALL#3 5.25 (GERMAN)	317170-01	DISK ASSY, MSDOS 4.01 INSTALL#3 5.25 (SWEDISH)
367028-01	DISK ASSY, MSDOS 4.01 INSTALL#4 5.25 (GERMAN)	317171-01	
367029-01	DISK ASSY, MSDOS 4.01 INSTALL#5 5.25 (GERMAN)	317172-01	
367030-01	DISK ASSY, MSDOS SHELL 1.01 5.25 (GERMAN)	317173-01	DISK ASSY, MSDOS SHELL 1.01 5.25 (SWEDISH)
317206-01	DISK ASSY PC60III UTILITIES 5.25 (GERMAN)	317217-01	DISK ASSY, PC60III UTILITIES 5.25 (SWEDISH)
317184-01	DISK ASSY MSDOS 4.01 INSTALL 3.5 (GERMAN)	317199-01	
317185-01	DISK ASSY, MSDOS 4.01 OPER SYS 3.5 (GERMAN)	317200-01	DISK ASSY, MSDOS 4.01 OPER SYS 3.5 (SWEDISH)
317186-01	DISK ASSY, MSDOS SHELL 1.01 3.5 (GERMAN)	317202-01	DISK ASSY, MSDOS SHELL 1.01 3.5 (SWEDISH)
317237-01	DISK ASSY, PC60III UTILITIES 3.5 (GERMAN)	317252-01	DISK ASSY, PC60III UTILITIES 3.5 (SWEDISH)
526014-07	SHIPPING ASSY KEYBOARD PC60-III (SWISS-FRANCE)	526014-10	
319968-01 318172-01	BOX, PACKING SPACER	319968-01 318172-01	BOX, PACKING Spacer
	CORD, POWER (SEV)		CORD, POWER (VDE)
318239-01	BINDER, 3-RING	318239-01	BINDER, 3-RING
318238-01	HOLDER, DISKETTE 5.25, 3-RING	318238-01	HOLDER, DISKETTE 5.25, 3-RING
318237-01	HOLDER, DISKETTE 3.5, 3-RING	318237-01	HOLDER, DISKETTE 3.5, 3-RING
312702-12	KEYBOARD ASSY (SWISS-FRENCH)	312702-02	KEYBOARD ASSY (US, ASCII)
363268-01	MANUAL, DOS 4.01 (FRENCH)	363272-01	MANUAL, DOS 4.01 (DUTCH)
319289-01	MANUAL, BASIC 3.22 (FRENCH)	319174-01	MANUAL, BASIC 3.22 (DUTCH)
363292-01	MANUAL, MSDOS SHELL (FRENCH)	363296-01	MANUAL, MSDOS SHELL (DUTCH)
362282-01	MANUAL, OPERATIONS GUIDE (FRENCH)	362287-01	MANUAL, OPERATIONS GUIDE (DUTCH)
367031-01	DISK ASSY, MSDOS 4.01 INSTALL#1 5.25 (FRENCH)	317877-01	DISK ASSY, MSDOS 4.01 INSTALL#1 5.25 (DUTCH)
367032-01	DISK ASSY, MSDOS 4.01 INSTALL#2 5.25 (FRENCH)	317878-01	DISK ASSY, MSDOS 4.01 INSTALL#2 5.25 (DUTCH)
367033-01	DISK ASSY, MSDOS 4.01 INSTALL#3 5.25 (FRENCH)	317879-01	DISK ASSY, MSDOS 4.01 INSTALL#3 5.25 (DUTCH)
367034-01	DISK ASSY, MSDOS 4.01 INSTALL#4 5.25 (FRENCH)	317880-01	DISK ASSY, MSDOS 4.01 INSTALL#4 5.25 (DUTCH)
367035-01 367036-01	DISK ASSY, MSDOS 4.01 INSTALL#5 5.25 (FRENCH)	317881-01	DISK ASSY, MSDOS 4.01 INSTALL#5 5.25 (DUTCH)
317207-01	DISK ASSY, MSDOS SHELL 1.01 5.25 (FRENCH) DISK ASSY, PC60III UTILITIES 5.25 (FRENCH)	367038-01	DISK ASSY, MSDOS SHELL 1.01 5.25 (DUTCH) DISK ASSY, PC60III UTILITIES 5.25 (DUTCH)
317187-01	DISK ASSY, PCOUIT UTILITIES 5.25 (FRENCH)	317215-01	DISK ASSY, MSDOS 4.01 INSTALL 3.5 (DUTCH)
317188-01	DISK ASSY, MSDOS 4.01 INSTALL 3.5 (FRENCH)	317196-01 317197-01	DISK ASSY, MSDOS 4.01 INSTALL 3.5 (DUTCH)
317189-01	DISK ASSY, MSDOS SHELL 1.01 3.5 (FRENCH)	317198-01	DISK ASSY, MSDOS 4.01 OPER 313 3.3 (DUTCH)
317238-01	DISK ASSY, PC60III UTILITIES 3.5 (FRENCH)		DISK ASSY, PC60III UTILITIES 3.5 (DUTCH)
011230-01	DIGIT AGGT, FUDUILI DTILITIES 3.5 (FRENCH)	317250-01	טוטת אטטד, רטטטווו טדובודובט ט.ט (טטדטדו)

Commodore International Spare Parts List SHIPPING ASSEMBLIES (Continued)

526014-11	SHIPPING ASSY KEYBOARD PC60-III (NORWAY)	526014-14	SHIPPING ASSY KEYBOARD PC60-III (BELGIUM)
319968-01	BOX, PACKING	319968-01	BOX, PACKING
318172-01	SPACER	318172-01	SPACER
903508-01	CORD, POWER (VDE)	903508-01	CORD, POWER (VDE)
318239-01	BINDER, 3-RING	318239-01	BINDER, 3-RING
318238-01	HOLDER, DISKETTE 5.25, 3-RING	318237-01	HOLDER, DISKETTE 5.25, 3-RING HOLDER, DISKETTE 3.5, 3-RING
318237-01	HOLDER, DISKETTE 3.5, 3-RING	312702-02	KEYBOARD ASSY (U.S. ASCII)
312702-09	KEYBOARD ASSY (NORWAY)	363272-01	MANUAL, DOS 4.01 (DUTCH)
363289-01	MANUAL, OPERATIONS GUIDE (NORWEGIAN) MANUAL, DOS 4.01 (ENGLISH)	319174-01	MANUAL, BASIC 3.22 (DUTCH)
363267-01	MANUAL, BASIC 3.22 (ENGLISH)	363296-01	MANUAL, MSDOS SHELL (DUTCH)
319292-01 363291-01	MANUAL, MSDOS SHELL (ENGLISH)	362287-01	MANUAL, OPERATIONS GUIDE (DUTCH)
317882-01	DISK ASSY, MSDOS 4.01 INSTALL 5.25 (ENGLISH)	317877-01	DISK ASSY, MSDOS 4.01 INSTALL#1 5.25 (DUTCH)
317883-01	DISK ASSY, MSDOS 4.01 SELECT 5.25 (ENGLISH)	317878-01	I DISK ASSY, MSDOS 4.01 INSTALL#2 5.25 (DUTCH)
317884-01	I DISK ASSY MSDOS 4.01 OPER SYST 5.25 (ENGLISH)	317879-01	DISK ASSY, MSDOS 4.01 INSTALL#3 5.25 (DUTCH)
317885-01	I DISK ASSY MSDOS 4.01 OPER SYS2 5.25 (ENGLISH)	317880-01	IDISK ASSY, MSDOS 4.01 INSTALL#4 5.25 (DUTCH)
317886-01	I DISK ASSY MSDOS 4.01 OPER SYS3 5.25 (ENGLISH)	317881-01	DISK ASSY, MSDOS 4.01 INSTALL#5 5.25 (DUTCH)
317887-01	DISK ASSY, MSDOS SHELL 1.01 5.25 (ENGLISH)	367038-01	DISK ASSY, MSDOS SHELL 1.01 5.25 (DUTCH)
317174-01	I DISK ASSY, PC60III UTILITIES 5.25 (ENGLISH)	317215-01	DISK ASSY, PC60III UTILITIES 5.25 (DUTCH)
317181-01	DISK ASSY, MSDOS 4.01 INSTALL 3.5 (ENGLISH)	317196-01	DISK ASSY, MSDOS 4.01 INSTALL 3.5 (DUTCH)
317182-01	DISK ASSY, MSDOS 4.01 OPER SYS 3.5 (ENGLISH)	317197-01	DISK ASSY, MSDOS 4.01 OPER SYS 3.5 (DUTCH)
317183-01	DISK ASSY, MSDOS SHELL 1.01 3.5 (ENGLISH)	317198-01	DISK ASSY, MSDOS SHELL 1.01 3.5 (DUTCH)
317218-01	DISK ASSY, PC60III UTILITIES 3.5 (ENGLISH)	317250-01	(50.50.7)
526014-12	SHIPPING ASSY KEYBOARD PC60-III (FINLAND)		SHIPPING ASSY KEYBOARD PC60-III (PORTUGAL)
319968-01	BOX, PACKING	319968-01	
318172-01	SPACER	318172-01	SPACER CONTRACTOR OF THE CONTR
903508-01	CORD, POWER (VDE)	903508-01	CORD, POWER (VDE)
318239-01	BINDER, 3-RING	318239-01	BINDER, 3-RING
318238-01	HOLDER, DISKETTE 5.25, 3-RING	318238-01	HOLDER, DISKETTE 5.25, 3-RING
318237-01	HOLDER, DISKETTE 3.5, 3-RING	318237-01	
312702-11	KEYBOARD ASSY (FINLAND)	312702-02	
363288-01	MANUAL, OPERATIONS GUIDE (FINNISH)	363364-01	
363267-01	MANUAL, DOS 4.01 (ENGLISH)	363365-01 363366-01	
319292-01	MANUAL, BASIC 3.22 (ENGLISH)	363367-01	
363291-01	MANUAL, MSDOS SHELL (ENGLISH) DISK ASSY, MSDOS 4.01 INSTALL 5.25 (ENGLISH)	317162-01	
317882-01 317883-01	DISK ASSY, MSDOS 4.01 INSTACE 5.25 (ENGLISH)	317163-01	
317884-01	DISK ASSY, MSDOS 4.01 SEEE01 3.25 (ENGLISH)	317164-01	
317885-01	DISK ASSY, MSDOS 4.01 OPER SYS2 5.25 (ENGLISH)	317165-01	
317886-01	DISK ASSY, MSDOS 4.01 OPER SYS3 5.25 (ENGLISH)	317166-01	DISK ASSY, MSDOS 4.01 INSTALL#5 (PORTUGUESE)
317887-01	DISK ASSY, MSDOS SHELL 1.01 5.25 (ENGLISH)	317167-01	DISK ASSY, MSDOS SHELL 1.01 (PORTUGUESE)
317174-01	DISK ASSY, PC60III UTILITIES 5.25 (ENGLISH)	317216-01	DISK ASSY, PC60III UTILITIES 5.25 (PORTUGUESE)
317181-01	DISK ASSY, MSDOS 4.01 INSTALL 3.5 (ENGLISH)	317203-01	DISK ASSY, MSDOS 4.01 INSTALL 3.5 (PORTUGUESE)
317182-01	DISK ASSY, MSDOS 4.01 OPER SYS 3.5 (ENGLISH)	317204-01	DISK ASSY, MSDOS 4.01 OPER SYS 3.5 (PORTUGUESE)
317183-01	DISK ASSY, MSDOS SHELL 1.01 3.5 (ENGLISH)	317205-01	DISK ASSY, MSDOS SHELL 1.01 3.5 (PORTUGUESE)
317218-01	DISK ASSY, PC60III UTILITIES 3.5 (ENGLISH)	317251-01	DISK ASSY, PC60III UTILITIES 3.5 (PORTUGUESE)
526014-13			
319968-01	BOX, PACKING		
318172-01	SPACER		
903508-01			
318239-01	BINDER, 3-RING		
318238-01	HOLDER, DISKETTE 5.25, 3-RING		
318237-01	HOLDER, DISKETTE 3.5, 3-RING		
312702-08	KEYBOARD ASSY (DENMARK)		
363286-01	MANUAL, OPERATIONS GUIDE (DANISH)		
363267-01	MANUAL, DOS 4.01 (ENGLISH)		
363267-01 319292-01	MANUAL, DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH)		
363267-01 319292-01 363291-01	MANUAL, DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) MANUAL, MSDOS SHELL (ENGLISH)		
363267-01 319292-01 363291-01 317882-01	MANUAL, DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) MANUAL, MSDOS SHELL (ENGLISH) DISK ASSY, MSDOS 4.01 INSTALL 5.25 (ENGLISH)		
363267-01 319292-01 363291-01 317882-01 317883-01	MANUAL, DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) MANUAL, MSDOS SHELL (ENGLISH) DISK ASSY, MSDOS 4.01 INSTALL 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 SELECT 5.25 (ENGLISH)		
363267-01 319292-01 363291-01 317882-01 317883-01 317884-01	MANUAL, DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) MANUAL, MSDOS SHELL (ENGLISH) DISK ASSY, MSDOS 4.01 INSTALL 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 SELECT 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS1 5.25 (ENGLISH)		
363267-01 319292-01 363291-01 317882-01 317883-01 317884-01 317885-01	MANUAL, DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) MANUAL, MSDOS SHELL (ENGLISH) DISK ASSY, MSDOS 4.01 INSTALL 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 SELECT 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS1 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS2 5.25 (ENGLISH)		
363267-01 319292-01 363291-01 317882-01 317883-01 317884-01 317885-01 317886-01	MANUAL, DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) MANUAL, MSDOS SHELL (ENGLISH) DISK ASSY, MSDOS 4.01 INSTALL 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 SELECT 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS1 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS2 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS3 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS3 5.25 (ENGLISH)		
363267-01 319292-01 363291-01 317882-01 317883-01 317884-01 317885-01 317887-01	MANUAL, DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) MANUAL, MSDOS SHELL (ENGLISH) DISK ASSY, MSDOS 4.01 INSTALL 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 SELECT 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS1 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS2 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS3 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS3 5.25 (ENGLISH) DISK ASSY, MSDOS SHELL 1.01 5.25 (ENGLISH)		
363267-01 319292-01 363291-01 317882-01 317883-01 317885-01 317886-01 317887-01 317174-01	MANUAL, DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) DISK ASSY, MSDOS 4.01 INSTALL 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 SELECT 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS1 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS2 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS3 5.25 (ENGLISH) DISK ASSY, MSDOS SHELL 1.01 5.25 (ENGLISH) DISK ASSY, PC60III UTILITIES 5.25 (ENGLISH)		
363267-01 319292-01 363291-01 317882-01 317883-01 317885-01 317885-01 317887-01 317174-01 317181-01	MANUAL, DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) MANUAL, MSDOS SHELL (ENGLISH) DISK ASSY, MSDOS 4.01 INSTALL 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 SELECT 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS1 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS2 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS3 5.25 (ENGLISH) DISK ASSY, MSDOS 5HELL 1.01 5.25 (ENGLISH) DISK ASSY, PC60III UTILITIES 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 INSTALL 3.5 (ENGLISH)		
363267-01 319292-01 363291-01 317882-01 317883-01 317885-01 317886-01 317174-01 317181-01 317182-01	MANUAL, DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) MANUAL, MSDOS SHELL (ENGLISH) DISK ASSY, MSDOS 4.01 INSTALL 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 SELECT 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS1 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS2 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS3 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS3 5.25 (ENGLISH) DISK ASSY, MSDOS SHELL 1.01 5.25 (ENGLISH) DISK ASSY, PC60III UTILITIES 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 INSTALL 3.5 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS 3.5 (ENGLISH)		
363267-01 319292-01 363291-01 317882-01 317883-01 317885-01 317885-01 317887-01 317174-01 317181-01	MANUAL, DOS 4.01 (ENGLISH) MANUAL, BASIC 3.22 (ENGLISH) MANUAL, MSDOS SHELL (ENGLISH) DISK ASSY, MSDOS 4.01 INSTALL 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 SELECT 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS1 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS2 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 OPER SYS3 5.25 (ENGLISH) DISK ASSY, MSDOS 5HELL 1.01 5.25 (ENGLISH) DISK ASSY, PC60III UTILITIES 5.25 (ENGLISH) DISK ASSY, MSDOS 4.01 INSTALL 3.5 (ENGLISH)		

Commodore International Spare Parts List SHIPPING ASSEMBLIES (Continued)

315960-01	SOFTWARE SUB ASSY PC60-III (U.S.A.)	315960-03	SOFTWARE SUB ASSY PC60-III (AUSTRALIA)
363291-01	MANUAL, MS DOS SHELL	363291-01	MANUAL MS DOS SHELL
363281-01	MANUAL, OPERATIONS GUIDE PC60-III	363281-01	MANUAL, OPERATIONS GUIDE PC60-III
318896-01	PROGRAM LICENSE AGREEMENT	318896-01	PROGRAM LICENSE AGREEMENT
314877-04	LIST, SERVICE CENTER (U.S.)	318876-01	LIST, SERVICE CENTER (AUSTRALIA)
251528-06	CARD, WARRANTY (U.S.)	318239-01	BINDER SOFTWARE PC50/60
312341-02	CARD, DISK EXCHANGE (U.S.)	318238-01	HOLDER DISK 3 RING 5.25"
318239-01	BINDER SOFTWARE PC50/60	318237-01	HOLDER DISK 3 RING 3.5"
318238-01	HOLDER, DISK 3 RING 5.25"	317882-01	DISKETTE ASSY DOS 4.01 INSTALL 5.25"
318237-01	HOLDER, DISK 3 RING 3.5"	317883-01	DISKETTE ASSY DOS 4.01 SELECT 5.25"
317882-01	DISKETTE ASSY DOS 4.01 INSTALL 5.25"	317884-01	DISKETTE ASSY DOS 4.01 OPER SYS 1, 5.25"
317883-01	DISKETTE ASSY DOS 4.01 SELECT 5.25"	317885-01	DISKETTE ASSY DOS 4.01 OPER SYS 2, 5.25"
317884-01	DISKETTE ASSY DOS 4.01 OPER SYS 1, 5.25"	317886-01	DISKETTE ASSY DOS 4.01 OPER SYS 3, 5.25"
317885-01	DISKETTE ASSY DOS 4.01 OPER SYS 2, 5.25"	317887-01	DISKETTE ASSY DOS 4.01 SHELL 1.01, 5.25"
317886-01	DISKETTE ASSY DOS 4.01 OPER SYS 3, 5.25"	317174-01	
317887-01	DISKETTE ASSY DOS 4.01 SHELL 1.01, 5.25"	317181-01	DISKETTE ASSY DOS 4.01 INSTALL 3.5"
317174-01	DISKETTE ASSY PC60-III UTILITIES 5.25"	317182-01	
317181-01	DISKETTE ASSY DOS 4.01 INSTALL 3.5"	317183-01	
317182-01	DISKETTE ASSY DOS 4.01 OPER SYS 3.5"	317218-01	
317183-01	DISKETTE ASSY DOS 4.01 SHELL 1.01 3.5"	318834-01	
317218-01	DISKETTE ASSY PC 60-III UTILITIES 3.5"	318884-01	CARD, WARRANTY (AUSTRALIA)
	SHRINK WRAP 12"	0.000101	OARIO, WARRANTT (AUSTRALIA)
	SOFTWARE SUB ASSY PC60-III (CANADA)		
	MANUAL MS DOS SHELL	1	
	MANUAL, OPERATIONS GUIDE PC60-III		
	PROGRAM LICENSE AGREEMENT		
	BINDER SOFTWARE PC50/60		
	HOLDER DISK 3 RING 5.25"		
	HOLDER DISK 3 RING 3.5 "		
317882-01	DISKETTE ASSY DOS 4.01 INSTALL 5.25"		
	DISKETTE ASSY DOS 4.01 SELECT 5.25"		
	DISKETTE ASSY DOS 4.01 OPER SYS 1, 5.25"	1	
	DISKETTE ASSY DOS 4.01 OPER SYS 2, 5.25"		
	DISKETTE ASSY DOS 4.01 OPER SYS 3, 5.25"		
	DISKETTE ASSY DOS 4.01 OFER 515 3, 5.25"		
	DISKETTE ASSY PC60-III UTILITIES 5.25"		
	DISKETTE ASSY DOS 4.01 INSTALL 3.5"		
	DISKETTE ASSY DOS 4.01 OPER SYS 3.5"		
317183-01	DISKETTE ASSY DOS 4.01 OFER \$15 3.5"		
317218-01	DISKETTE ASSY PC 60-III UTILITIES 3.5"		
318556-02	CARD, DISK EXCHANGE (CANADA)		
	SHRINK WRAP 12"		
	CARD, WARRANTY (CANADA)		
2.0002 01	Comb, Transmitt (UNITADA)		

Commodore International Spare Parts List MAJOR ASSEMBLIES

MAIN ASSY			ASSY (Continued)
313328-01	MAIN ASSY (VDE, BSI, SEV & SAA) 80MB HDD	380851-01	SLIDER,FDD 5.25" LEFT
313320-01	MAIN ASSY (CSA,UL) 80 MB HDD	380851-02	SLIDER,FDD 5.25" RIGHT
		312948-01	BRACKET, SUPPORT RETAINER 5.25" FDD
13328-03	MAIN ASSY (VDE, BSI, SEV & SAA) TOMB TO	325542-02	SCREW MACH EVT TH MA V COLL OTTY O YOU HOD OHACOLE ACCV
13328-04	MAIN ASSY (CSA,UL) 40MB HDD	300320 01	SCREW MACH EXT TH M4 X 6.0 LG QTY = 8 (ON HDD CHASSIS ASSY
13328-05	MAIN ASSY (VDE, BSI, SEV & SAA) NO HDD	390329-01	SCREW MACH M3.5 X 0.5 X 5.0 LG QTY = 9 (ON EXT CARD PANEL)
13328-06	MAIN ASSY (CSA,UL) NO HDD	900000-03	SCREW MACH M3 X 0.5 X 8.0 LG QTY = 10 (USE ON FDDRIVES)
12937-01	COVER,TOP	900800-05	I SUREW MACH M3 X 0.5 X 6.0 LG OTY = 9 (LISE TO MOLINT POR)
13334-01	BEZEL ASSY	906803-01	SCHEW MACH FLT HD M3 X 0.5 X 6.0 LG QTY = 6 (USE ON REAR
312938-01	COVED SIDE		[PANEL,FDD)
325542-02		906884-02	SCREW MACH M4 X 8.0 LG QTY = 2 (USE ON SUPPORT FEET)
316785-02		390251-03	STANDOFF "D" CONN QTY = 6
		390251-04	STANDOFF HEX M/F 5 MM QTY = 2- VIDEO D CONN
316785-04		313342 01	CORRED FOIL (ON TOR OF KARD COMM & DEAD DANK)
16785-01	EADEC, NATING	313032-01	COPPER FOIL (ON TOP OF KYBD CONN & REAR PANEL) RF SHIELD H.D.D.
	CHD	312032-01	RF SHIELD H.U.U.
316785-05	LABEL, RATING SUB:	312833-01	RF SHIELD 3.5" FD
16785-06	LABEL, RATING SUB:	312834-01	RF SHIELD 5.25"
316585-04	LABEL, HDD TYPE	905453-01	TERMINAL LUG (ON P/S FAN OPENING & CONN PWR CABLE GROUND
16585-01			SSIS WELDMENT ASSY
113320-01	CPU BASE ASSY (VDE,BSI,SEV & SAA) 80MB HDD		
212220 02	CPU BASE ASSY (CSA,UL) 80MB HDD	313333-01	MAIN CHASSIS WELDMENT ASSY
113329-02	COULDAGE AGOV (VDE DEL CEV & CAA) ADMR HDD	312935-01	CHASSIS, MAIN WELDMENT
	CPU BASE ASSY (VDE,BSI,SEV & SAA) 40MB HDD	312940-01	PANEL, FRONT
313329-04		312936-01	SUPPORT, CORNER ANGLE
313329-06	CPU BASE ASSY (CSA,UL) NO HDD	312962-01	PANEL, GUIDE
380851-01	FDD SLIDER 5.25" LEFT (PLACE IN PLASTIC BAG)	212045.01	PRACE CURRENT S OF THE
380851-02		312945-01	BRACKET, SUPPORT 5.25" FDD
	FDD SLIDER 3.5" (PLACE IN PLASTIC BAG)	312946-01	BRACKET, SUPPORT 3.5" FDD
			STAND-OFF, 3M 0.5X10.0 MM (PRESS OR WELD IN PLACE)
		KEYSWITCH	I LOCK ASSEMBLY
312958-02			
312958-03	HDD SLIDE RETAINER RIGHT SHORT	312970-01	LOCK ASSY, KEYSWITCH
312958-04		312965-01	SWITCH KEYLOCK 3 POSITIONS
318951-01	BAG PLASTIC ZIPLOCK (FOR HDD RETAINERS & SCREWS)	903756-06	WIRE, LEAD AWG 24 L = 400MM (BLUE)
		903756-10	WIRE, LEAD AWG 24 L = 400MM (BLACK)
			WIRE, LEAD AWG 24 L = 400MM (ORANGE)
BEZEL ASS	SEMBLY		
313334-01	BEZEL ASSEMBLY	903353-01	
312939-02			CONNECTOR HOUSING 3P
		905475-03	TUBING, HEAT SHRINK (LENGTH = 25 MM)
		POWER LI	IE SWITCH ASSEMBLY
900003-02	SCREW SELF TAPPING M3 X 4.0 LG QTY = 8 (USE ON FDD HOLE		
	COVERS)	312969-01	SWITCH, POWER ASSY
312679-03	FDD HOLE COVERS BEZEL 5.25" QTY = 3 (LIGHT BEIGE)		SHEILDED CABLE 4 CONNECTOR AWG 14
312955-01	FDD HOLE COVER BEZEL 3.5" (LIGHT BEIGE)	313340-01	TORIOD RING
CPU BASE		390535-01	
		390626-01	
313329-01	CPU BASE ASSY (VDE, BSI, SEV & SAA) 80MB HDD	1 1	
313329-02	CPU BASE ASSY (CSA,UL) 80MB HDD	905475-03	
313329-03	CPU BASE ASSY (VDE, BSI, SEV & SAA) 40MB HDD	905051-03	
313329-04	CPU BASE ASSY (CSA,UL) 40MB HDD	390394-01	
313320 05	CPU BASE ASSY (VDE,BSI,SEV & SAA) NO HDD	906115-03	TOROID
313300 00	COLL BACE ACCY (CCA III) NO HOD	FI OPPY DE	SK CABLE ASSY
13329-00	CPU BASE ASSY (CSA,UL) NO HDD		
	PCB ASSY		CABLE, FLOPPY DISK ASSY 2 - 5.25" &
	FRAME, MAIN WELDMENT ASSY	903135-10	CABLE, FLAT 34 POS (LENGTH = 450 MM)
313332-01	CHASSIS, HDD ASSY 80MB HDD	903468-05	CONN,34P DUAL ROW
313332-02	CHASSIS, HDD ASSY 40MB HDD	380328-01	PLUG, KEYING
313332-03		380319-02	
313331-01			
		380320-01	PLUG,KEYING
313330-01	FOOT ASSY QTY = 2	SUPPORT	FEET ASSY
312943-01	PANEL, REAR	313330-01	
380120-01	PANEL, EXTENSION CARD QTY = 9		
251118-01		312944-01	
313341-01		312971-01	SUPPORT SLIDE, FOOT
390484-01		KEYSWITC	H HOLDER ASSY
390484-02		313331-01	
313067-02		312954-01	SWITCH POWER ILLUMINATED GREEN
380025-02		312941-02	HOLDER, KEYSWITCH
312968-01		312969-01	SWITCH, KEY ASSY
	CABLE ASSY, HD		
		312970-01	LOCK ASSY, KEYSWITCH
312695-02	CLIDED COD 3 5 "	1 0000000 00	
312953-02 312953-01 312949-01		380020-03 313340-02	

Commodore International Spare Parts List

MAJOR ASSEMBLIES (Continued)


THE PLAN CHARGE ACCV	FLOPPY DRIVE GROUND CABLE ASSY
HARD DISK CHASSIS ASSY	313341-01 FLOPPY DRIVE GROUND CABLE 905451-01 TERMINAL RING TONGUE 324594-02 SPADE TERMINAL 903753-10 LEAD WIRE AWG 18 BLACK LENGTH = 120MM 903753-10 LEAD WIRE AWG 18 BLACK LENGTH = 100MM LEAD WIRE AWG 18 BLACK LENGTH = 70MM HEAT SHRINK TUBING LENGTH = 20MM


Commodore International Spare Parts List PCB Components PCB Assembly #313306-01


IC COMPON	IENTS		OSCILLATO		
390486-02	80386 CPU 25 MHZ	U68	325566-27	50.00 MHZ	G3
390468-04	P82A303 ADDRESS BUFFER (HIGH)	U70	325566-20	36.00 MHZ	G6
	P82C301-25 25 MHZ BUS CONTROLLER	U82	325566-18	25.175 MHZ	G4
90469-01	PROCOCO PEDIDUEDAL C CONTROLL FR	U79	325566-19	28.322 MHZ	
390463-01	P82C206 PERIPHERALS CONTROLLER		325566-10		G8
90464-01	F82C307-25 25 MHZ CACHE CONTROLLER	U23		16.00 MHZ	G7
90465-01	P82A306 CONTROL SIGNAL BUFFER	U71	325566-17	9.6 MHZ	G5
90466-01	P82B305 DATA BUFFER	U72,U94	325566-05	6.00 MHZ	G1
90467-01	P82A304 ADDRESS BUFFER (LOW)	U69	325566-21	20.00 MHZ	G2
		U106		20:00 11112	uz
390302-01	PVGA-1A PARADISE VIDEO	U96	CRYSTALS		
390423-01	SERIAL/PRINTER COMBO CHIP		900560-01	32.768 MHZ	Y1
90304-03	37C65B FDC	U127		1.8432 MHZ	Y4
90303-02	IMS171 COLOR LOOKUP TABLE	U110	000000-10	14.31818 MHZ	
90580-01	P8242 MICROCONTROLLER	U77			Y2
18087-01	5720 IO/MOUSE CNTRL	U78	RESISTOR	NETWORKS	
	DALACLED DECET/DEADY/IOCHEDY	U55	390227-04	33 OHM 10P 5EL SIL	DNA DNA DNE DNAG
90510-01	PAL16L8B - RESET/READY/IOCHRDY		330221-04	33 OHW TOP SEL SIL	RN1,RN4,RN5,RN18,
90512-01	PAL16L8B - DATA BUFF CNTRL	U87			RN28,RN32,RN33,RN36
90514-01	PAL16L8B - BUSY/PREREQ/IRQ13	U93			RN39,RN40,RN42-RN44
90511-01	PAL20L10 - AT HD INTFC	U85	902410-10	1K 10P 9EL SIP	RN19.RN29
390513-01	PAL20L10 - CHIP SELECT	U88	902410-18	2.2K 10P 9EL SIP	RN31
	DALON OD VICA DIS CATO	U103	902410 20	270 OHM 10P 9EL SIP	
390515-01	PAL20L8B - VGA BUS CNTRL		000440-20		RN30
390516-01	PAL20L8B - VGA PAGE/IO CNTRL	U109	902410-08		RN22,RN26,RN27,RN35
390083-04	DRAM 64 X 4 (256K BIT) @100NS	U114,U115,U121,U122,	902410-07	10K 10P 9EL SIP	RN8-RN15,RN17,RN20,
		U130,U131,U136,U137			RN21,RN23-RN25,RN34
318099-02	DRAM 256 X 4 (1 MEG BIT DRAM)@100NS	U3-U6,U15,U16,U20,	902422-03	33 OHM 8P 4EL SIL	RN2,RN3,RN6,RN7,
,10033-02	DITAM 200 A 4 (1 MILO DIT DITAM)@ 100145		302-722-03	STATE OF	
		U21,U29,U30,U32,U33,	000415 15	450 0104 400 054 015	RN16,RN37,RN38
		U40,U41,U46,U47	902410-19	150 OHM 10P 9EL SIP	RN41
390226-04	DRAM 256K X 1 @100NS	U1,U2,U10,U11,U23,	RESISTORS	5% @ 1/4 WATT, CARBON FILM, UNLESS OT	HERWISE SPECIFIED
		U24.U35.U36			
90485-01	SRAM 2K X 2K X 16 @35 NS	U37,U38,U48,U49	901550-39		R8
390473-01	ROM VGA/BIOS LOW PC60III	U67	901550-64	10 OHM	R12,R14,R22,R24,R29,
			1		R31,R44
390474-01	ROM VGA/BIOS HIGH PC60III	U73	901550-63	22 OHM	R27,R39,R41,R43,R47
901882-01	1488	U117	901550-105		
901883-01	1489	U125			R15,R21,R33,R34
901521-21	74LS02	U116	901550-94		R42
901521-03		U132	901550-83	2MEG OHM	R7
	74LS08		901550-124	160K OHM	R28
901521-30	74LS14	U60	901550-21	30K UHM	R5
901521-38	74LS38	U123,U138			
901521-34	74LS175	U89	901550-58		R3,R17,R18,R30
901521-13	74LS244	U58,U98,U99,U113,U120	901550-01		R9,R25,R50
318066-01	74F00		901550-112	200 OHM	R10
		U66	901550-18	2.2K OHM	R36
390110-01	74F04	U86,U108,U126		4.7K OHM	R23,R38,R58
390203-01	74F08	U75,U102,U134			R11
390077-01	74F32	U52,U57,U90,U91			
390081-01	74F74	U111,U118	901550-20	10K OHM	R4,R6,R13,R16,R35,R37
90198-01	74F86				R40,R53,R57
		U92	901550-84	1M OHM	R49
380280-02	74F125	U97,U135		1.2K OHM	R26
390523-01	74F157	U56		1.8K OHM	R19
318050-01	74F244	U22,U50,U104,U107			
390089-01	74F245	U25,U34,U39,U43,U44,	901550-12		R32
			901550-14		R2
200004 04	745057	U45	901550-52	220 OHM	R61,R63
	74F257	U80	901550-67	820 OHM	R1
390108-01	74F373	U62,U63,U76	901550-75		R51
390517-01	74F827	U7.U9			
390519-01	74F841	U8,U12,U14	901600-28	2.2 OHM 5% @ 1/2 WATT	R20,R59
390518-01	74F828		RESISTORS	1% @ 1/4 WATT, CARBON FILM	
		U13,U17			DES DES DES
390520-01	74ALS04	U112	901751-44		R52,R55,R56
390521-01	74ALS174	U128	901751-61	365 OHM	R60
390522-01	74ALS240	U81	901751-55		R62,R64
390579-01	74LS244A	U19.U26.U51.U61.U64.	001751.39	4.64K OHM	R54
,500,0.01	1.150547/				
40000 0:	7411 0045	U65	901751-62		R51
318092-01	74ALS245	U18,U27,U31,U42	RADIAL CE	RAMIC CAPACITORS 5% @ 50 VOLT	
90058-01	74ALS373	U95.U100			COCO
90310-01	74HCT74	U54	900019-07	.047 UF	C268
01522-06			900019-25	27 PF	C93,C150,C161,C196
		U119	900019-17	47 PF	C107,C132,C135,C143,
01522-30	7407	U74,U59	300013-17		
390324-01	TL431	U133			C151,C244,C245,C254
90323-01	4069				
		U53,U124			
318827-01	LM339	l U129			


Commodore International Spare Parts List
PCB Components (Continued)
PCB Assembly #313306-01


ADIAL CERAMIC CAPACITORS (Continued)			MISCELLANEOUS		
00019-15		C169,C172,C173,C176-	251842-02	EMI FILTER 100 PF	LC1-LC3,LC21-LC28
00019-13	100 71	C181,C184,C186-C189,	390257-02	EMI FILTER 100 PF	LC29-LC33
		C191,C193,C194,C200,	390275-04	EMI FILTER 100 PF	LC4-LC20
		C201,C205,C207,C208,	903025-08	FERRITE BEADS (AXIAL)	L1-L10,L38,L39
		C211,C214,C246	903025-01	FERRITE BEADS (AXIAL)	L17,L20,L21,L25,L27,
00040 04	4000 DE	C156,C198,C117,C160,		The state of the s	L29-L37,L40
00019-21	1000 PF	C233,C267	390253-02	FERRITE BEADS THREE TURN	L12,L13,L14,L16
		C48.C49,C51,C52,C54-			
900022-03	.1 UF	C56.C60.C66-C69,C72-	000000	TETHITE BEADS (ANIAL)	L18,L24
		C76.C79-C81,C83,C84,	390471-01	BATTERY, HOLDER	TDK2BF503AR00TA
		C87,C88,C92,C95-C98,		BATTERY, COVER	BT1,BT2
		C101-C103,C104-C106,	390471-02	DATTERY, CUVER	BT1,BT2
			390472-01	BATTERY, LITHIUM	BT1,BT2
		C108,C110-C112,C114,		FUSE PICO 4A	F1,F2
		C116,C118,C119,C121,		TRANSISTOR 2N3904	Q1,Q3,Q4,Q5
		C122,C124-C127,C129-		TRANSISTOR 2N3906	Q2
		C131,C134,C136-C141,	312680-01	BEEPER, PIEZO QMB12	L11
		C146,C148,C149,C152-	900850-01	DIODE 1N4148	CR1-CR7
	1	C155,C157,C162,C165-	251260-01	SWITCH, PUSH BUTTON N. O.	S1
		C168,C170,C171,C174,	904775-05	SWITCH, PIANO DIP 16P 8 POS	S2
		C175,C182,C183,C185,	251313-01	SOCKET 48P DIP	U96
		C190,C195,C197,C199,	390296-06	SOCKET 121P PGA 13 X 13	U83
		C202-C204,C206,C209,	390296-07	SOCKET 132P PGA 14 X 14	U68
		C210,C212,C213,C215-		SOCKET 28P DIP	U67,U73,U110
		C232,C234,C236,C237,		SOCKET 40P DIP	U101.U105
		C239-C243,C249-C253,		SOCKET 44P PLCC	
		C257-C263.C266.C270.			U37,U38,U48,U49
		C273-C275,C8-C10,C14,	390185-02	SOCKET 68P PLCC	U69,U70,U71,U72,U78
			000405.04	COOKET ALD DI CO	U94
		C17,C18,C24,C27,C28,	390185-01		U79,U82
		C31-C36,C41,C42	390185-04		U106
900022-05	.33 UF	C2,C3,C6,C7,C12,C13,	390043-01	BLOCK, SHORTING 2 POS	
		C22,C23,C29,C30,C39,	390186-01	JUMPER	L15,L18,L19,L22-L24,
		C40,C46,C47,C57,C58,			L26,L28
		C61,C62,C70,C71,C77,	SUBSTITUT	F PARTS	
		C78,C85,C86,C247,C248,			Tuana
		C255,C256,C264,C265,	318091-01	IC PPC1 PRINTER INTERFACE	U101
		C271,C272		IC 8250 SERIAL INTERFACE	U105
900020-04	.0047 UF	C158		SOCKET 40 PIN DIP	U101
900020-05	1 UF	C109,C113,C115,C120,		CRYSTAL 1.8432 MHZ	Y3
	I Ur	C128,C133,C144,C145,	901550-109	RESISTOR CARBON FILM 4 MEG	R45
			901550-84	RESISTOR CARBON FILM 1 MEG	R48
		C147,C163,C164	901550-105	RESISTOR CARBON FILM 33 OHM	R46
ELECTROLY	YTIC CAPACITORS		900019-13	CAPACITOR RADIAL LEAD 22 PF	C238
900402-15	ELECT TANT RAD 10 UF	C1,C4,C5,C11,C15,C16,	900019-17	CAPACITOR RADIAL LEAD 47 PF	C244
		C19-C21,C25,C26,C37,		ABOVE SUBSTITUTE PARTS ARE TO BE USED	
	1	C38,C43-C45,C50,C53,	11	WITH DELETION OF:	Y4,R49,C246,C254,
	1	C59,C63-C65,C82,C89-	11		C245,U95
		C91,C94,C99,C100,C123,			02.0,000
					1
		C142,C159,C192,C235,	11		
CONNECTO	l e	C269,C276-C279	{		
			1		
390242-01		J44			1
390334-01		J38			
390242-05		J32	11		
390241-05		J31		1	
903446-07	EXPANSION 36/62 P	J2/J3,J5/J6,J7/J8,J9/			
00011001		J10,J11/J12,J14/J15,		1	
00011001					
00011001			1 1		1
903446-02	EXPANSION 62 P	J16/J17,J18	11		1
903446-02		J16/J17,J18 J1,J4			
903446-02 252166-03	DIN 5 PIN ROUND FE	J16/J17,J18 J1,J4 J28			
903446-02	DIN 5 PIN ROUND FE	J16/J17,J18 J1,J4 J28 J22-1,2,3/J23-1,2,3/			
903446-02 252166-03	DIN 5 PIN ROUND FE	J16/J17,J18 J1,J4 J28 J22-1,2,3/J23-1,2,3/ J26-1,2/J27-1,2/J28-1,3.			
903446-02 252166-03	DIN 5 PIN ROUND FE	J16/J17,J18 J1,J4 J28 J22-1,2,3/J23-1,2,3/ J26-1,2/J27-1,2/J28-1,3, 4/J30-1,2/J33-1,2,3/			
903446-02 252166-03	DIN 5 PIN ROUND FE	J16/J17,J18 J1,J4 J28 J22-1,2,3/J23-1,2,3/ J26-1,2/J27-1,2/J28-1,3, 4/J30-1,2/J33-1,2,3/ J34-1,2,3/J35-1,2/J36-1,			
903446-02 252166-03	DIN 5 PIN ROUND FE	J16/J17,J18 J1,J4 J28 J22-1,2,3/J23-1,2,3/ J26-1,2/J27-1,2/J28-1,3, 4/J30-1,2/J33-1,2,3/ J34-1,2,3/J35-1,2/J36-1, 2/J37-1,2,3/J39-1,2,3/			
903446-02 252166-03	DIN 5 PIN ROUND FE	J16/J17,J18 J1,J4 J28 J22-1,2,3/J23-1,2,3/ J26-1,2/J27-1,2/J28-1,3, 4/J30-1,2/J33-1,2,3/ J34-1,2,3/J35-1,2/J36-1,			
903446-02 252166-03	DIN 5 PIN ROUND FE	J16/J17,J18 J1,J4 J28 J22-1,2,3/J23-1,2,3/ J26-1,2/J27-1,2/J28-1,3, 4/J30-1,2/J33-1,2,3/ J34-1,2,3/J35-1,2/J36-1, 2/J37-1,2,3/J39-1,2,3/			
903446-02 252166-03	DIN 5 PIN ROUND FE	J16/J17, J18 J1, J4 J28 J22-1, 2, 3/J23-1, 2, 3/ J26-1, 2/J27-1, 2/J28-1, 3, 4/J30-1, 2/J33-1, 2, 3/ J34-1, 2, 3/J35-1, 2/J36-1, 2/J37-1, 2, 3/J39-1, 2, 3/ J42-1, 2, 3/J43-1, 2, 3/J45- 1, 2, 3/J46-1, 2, 3/J47-1, 2,			
903446-02 252166-03	DIN 5 PIN ROUND FE POST W/W .025 SQ	J16/J17,J18 J1,J4 J28 J22-1,2,3/J23-1,2,3/ J26-1,2/J27-1,2/J28-1,3, 4/J30-1,2/J33-1,2,3/ J34-1,2,3/J35-1,2/J36-1, 2/J37-1,2,3/J39-1,2,3/ J42-1,2,3/J43-1,2,3/J45- 1,2,3/J46-1,2,3/J47-1,2, 3/J48-1,2,3			
903446-02 252166-03 390649-01	DIN 5 PIN ROUND FE POST W/W .025 SQ THEADER 34P DIL	J16/J17, J18 J1, J4 J28 J22-1, 2, 3/J23-1, 2, 3/ J26-1, 2/J27-1, 2/J28-1, 3, 4/J30-1, 2/J33-1, 2, 3/ J34-1, 2, 3/J35-1, 2/J36-1, 2/J37-1, 2, 3/J39-1, 2, 3/ J42-1, 2, 3/J43-1, 2, 3/J45- 1, 2, 3/J46-1, 2, 3/J47-1, 2,			

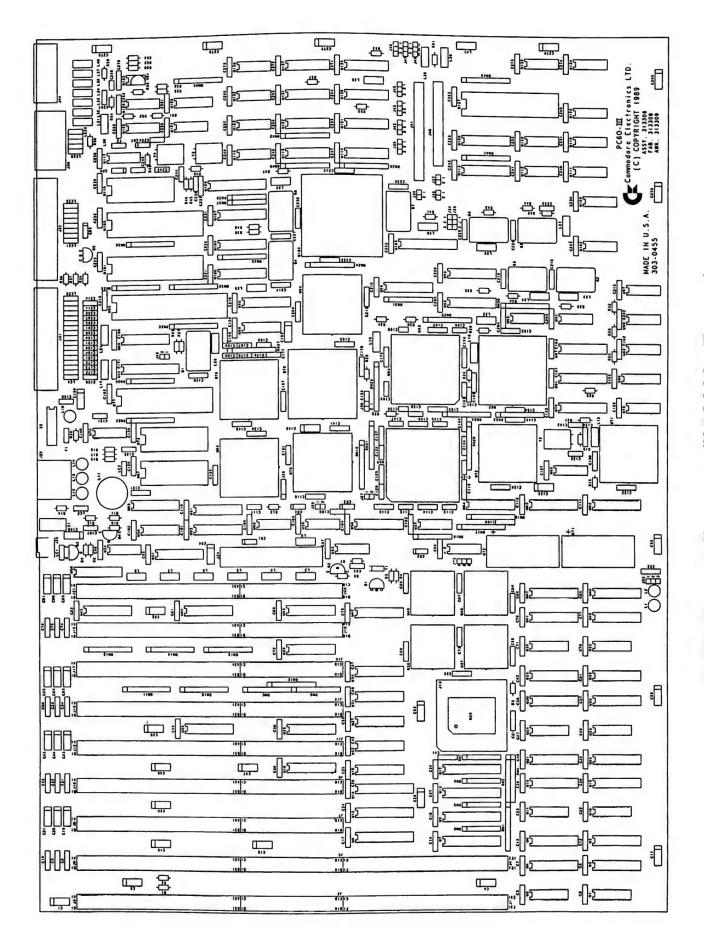


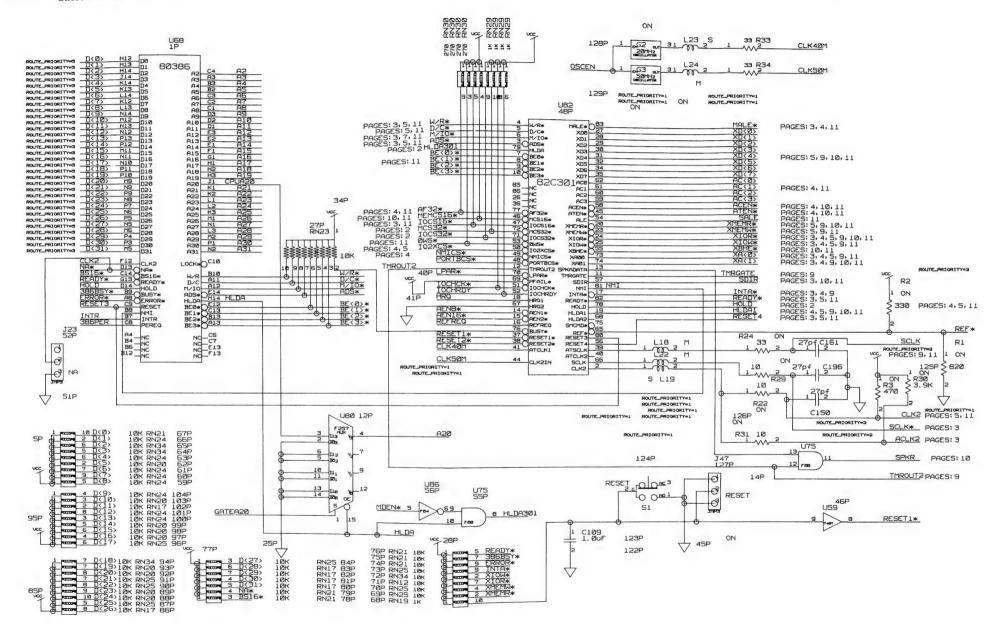


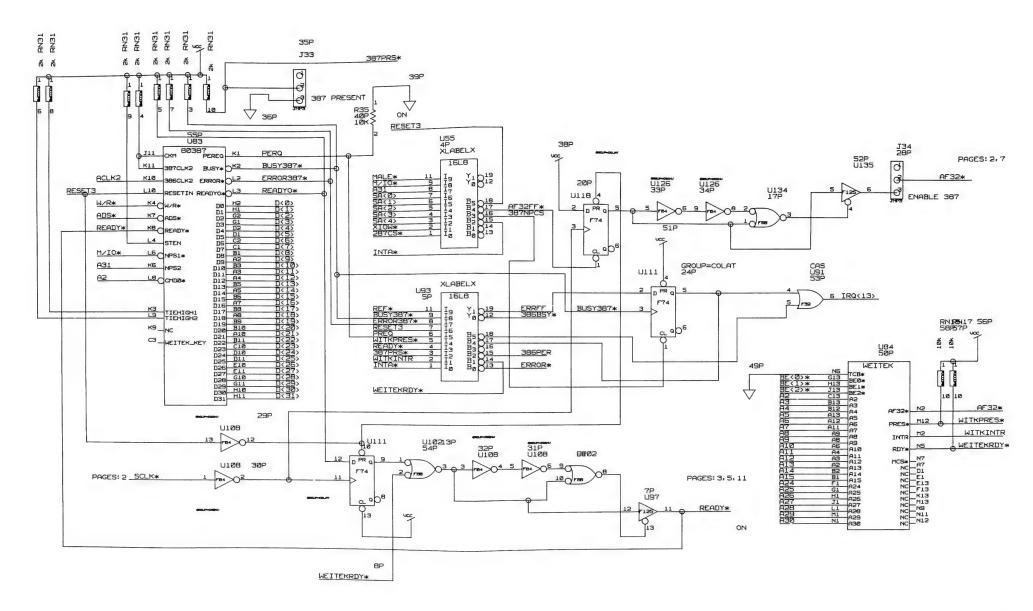


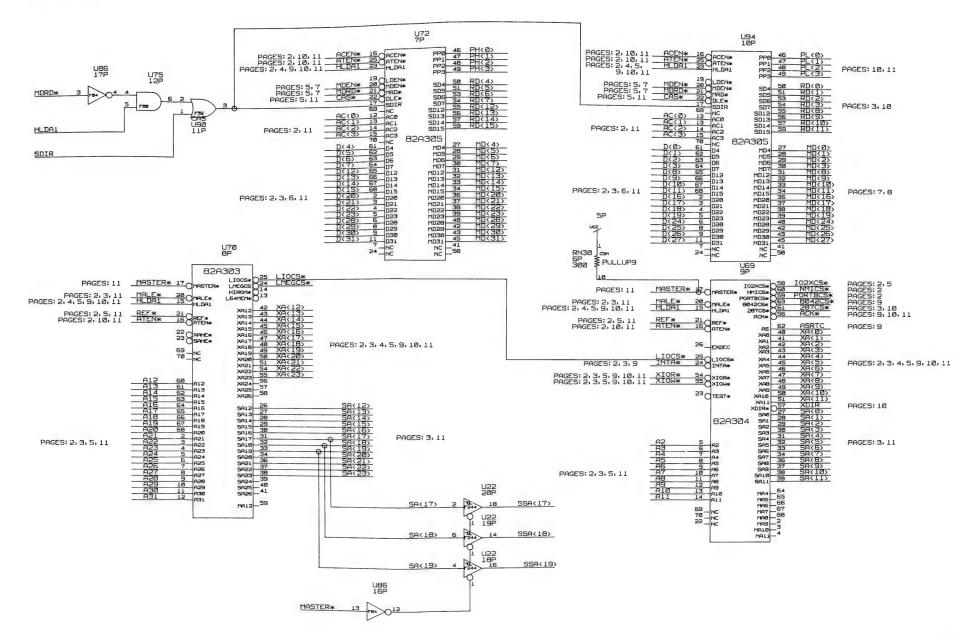

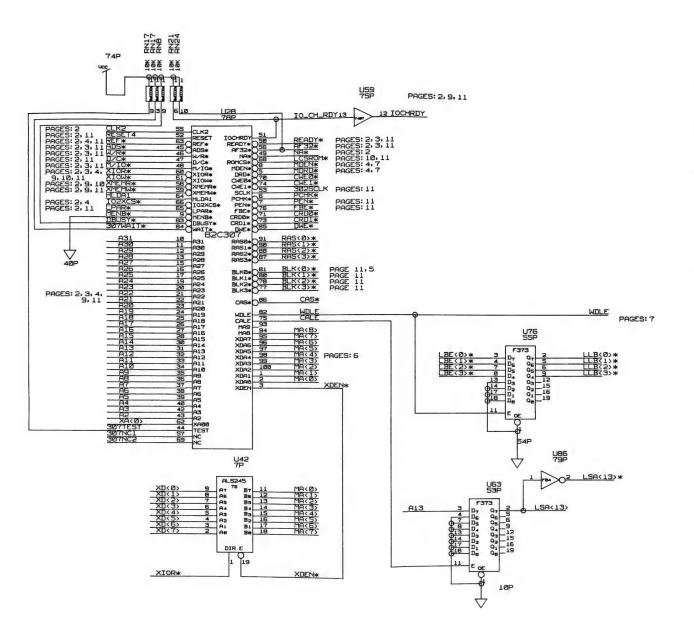


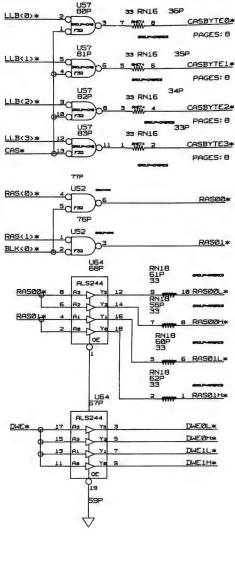


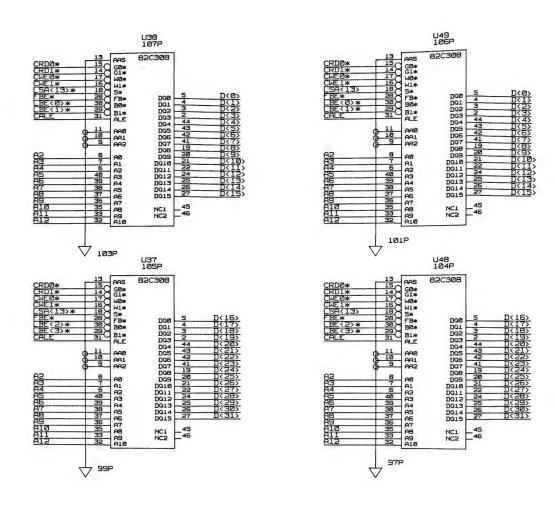


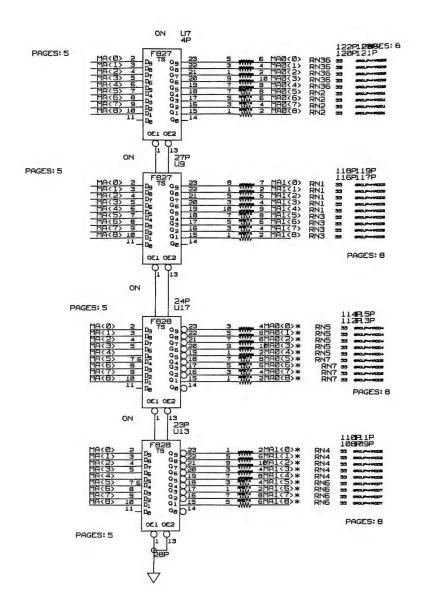



This in the PGA version of the 82c307 the flat pack is on page 5 (one or the other will be used).

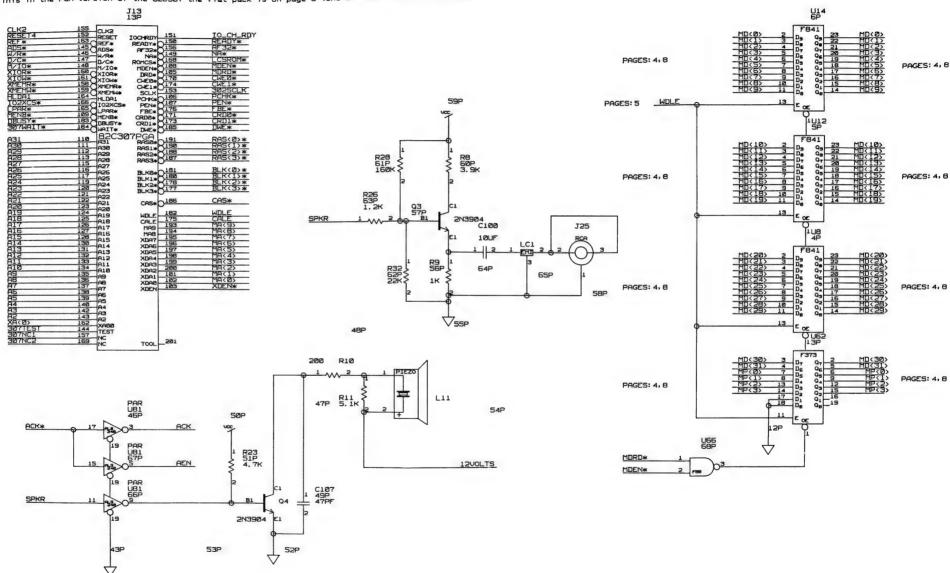


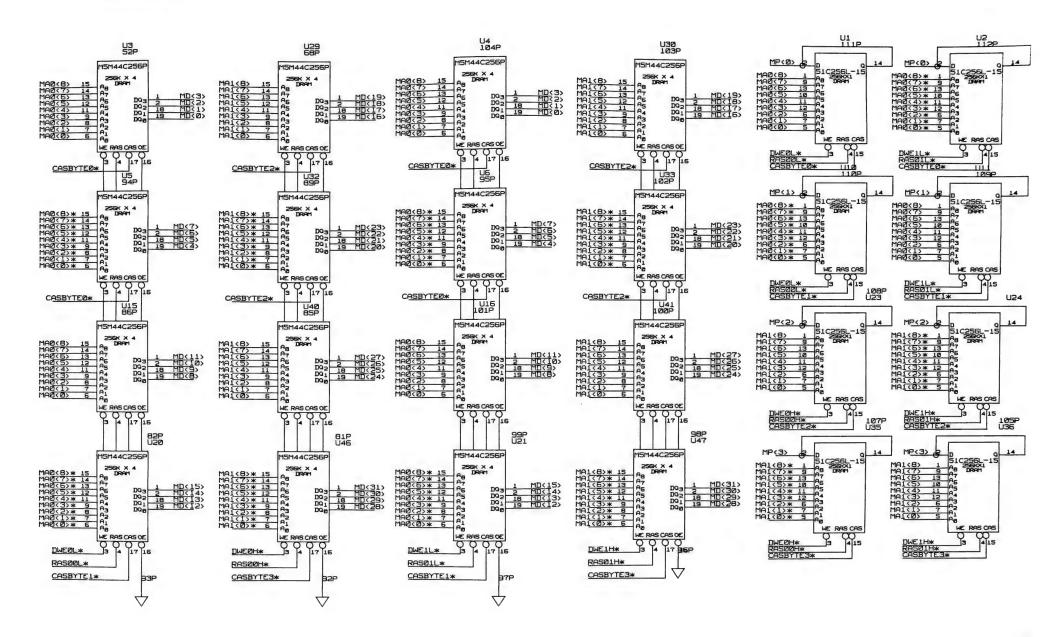


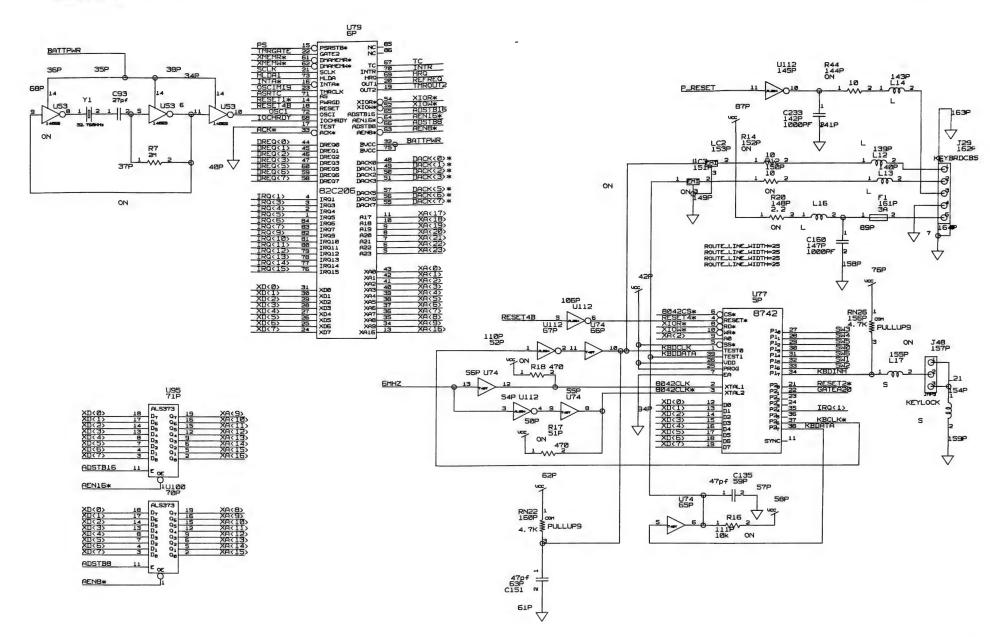


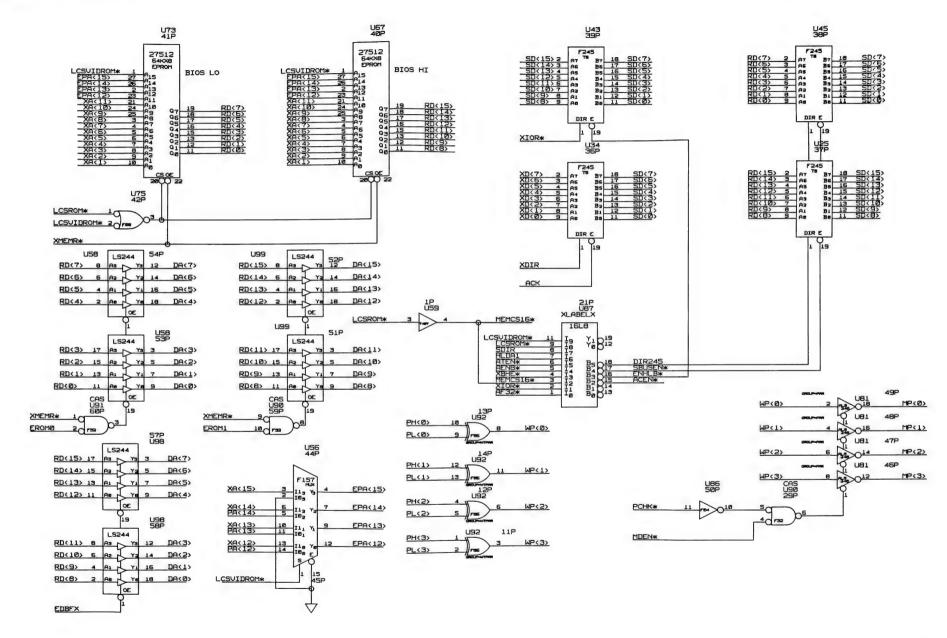


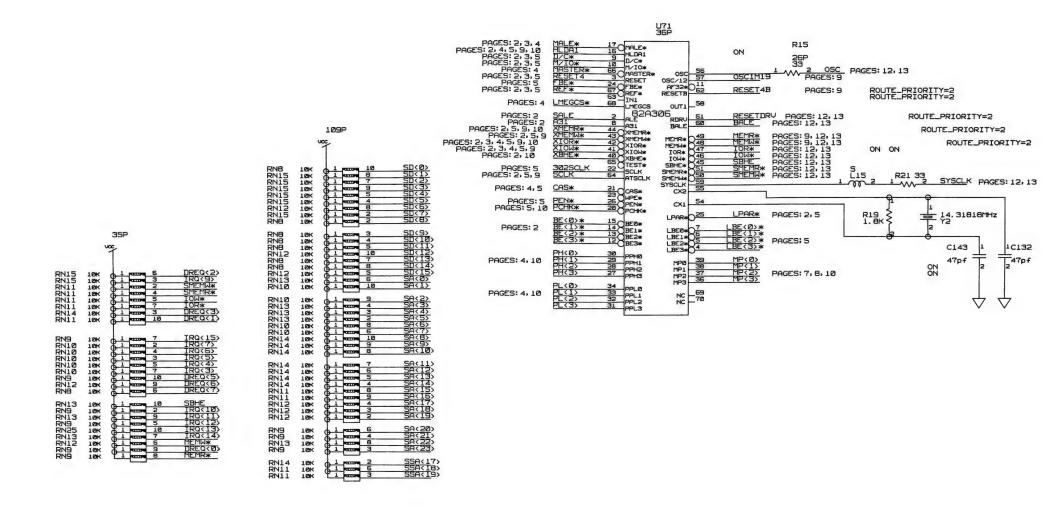


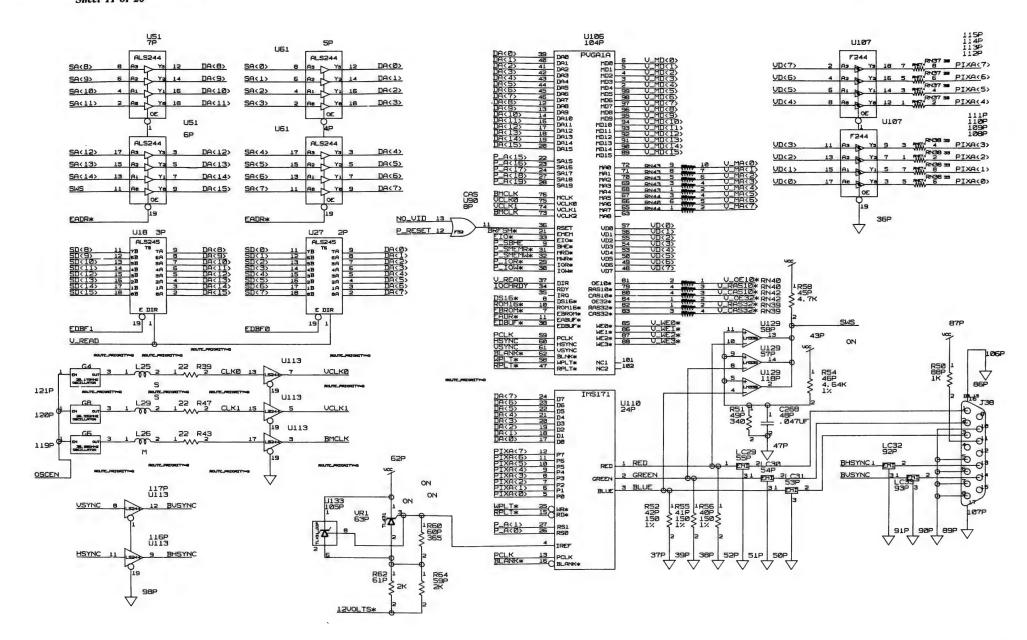


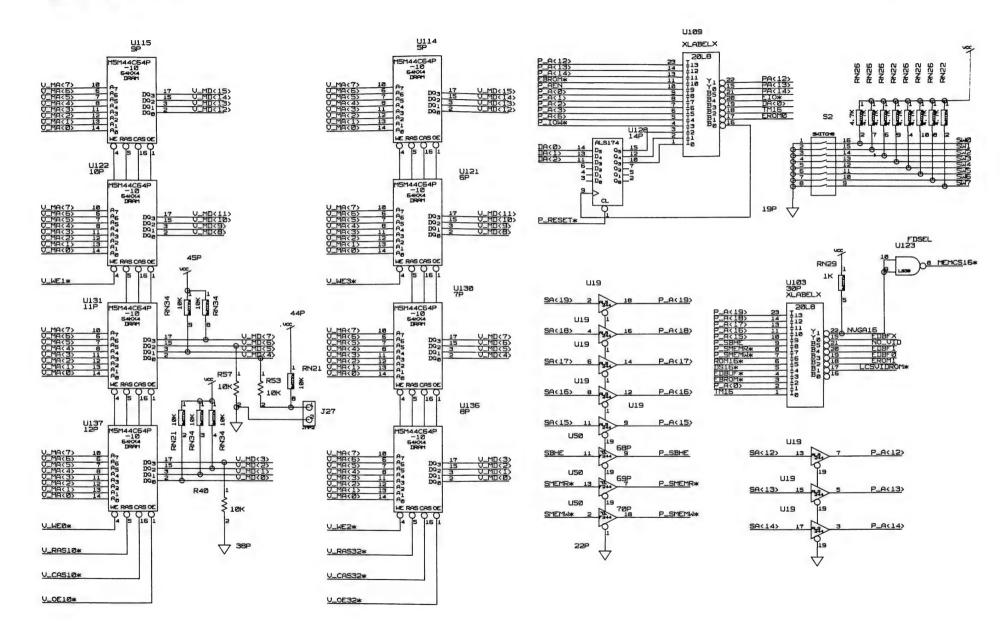


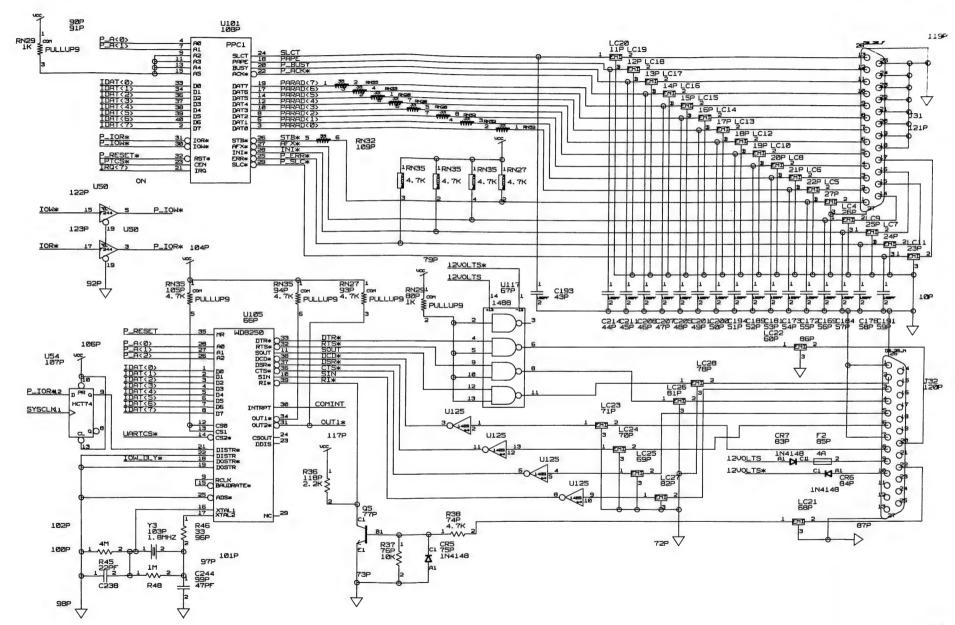


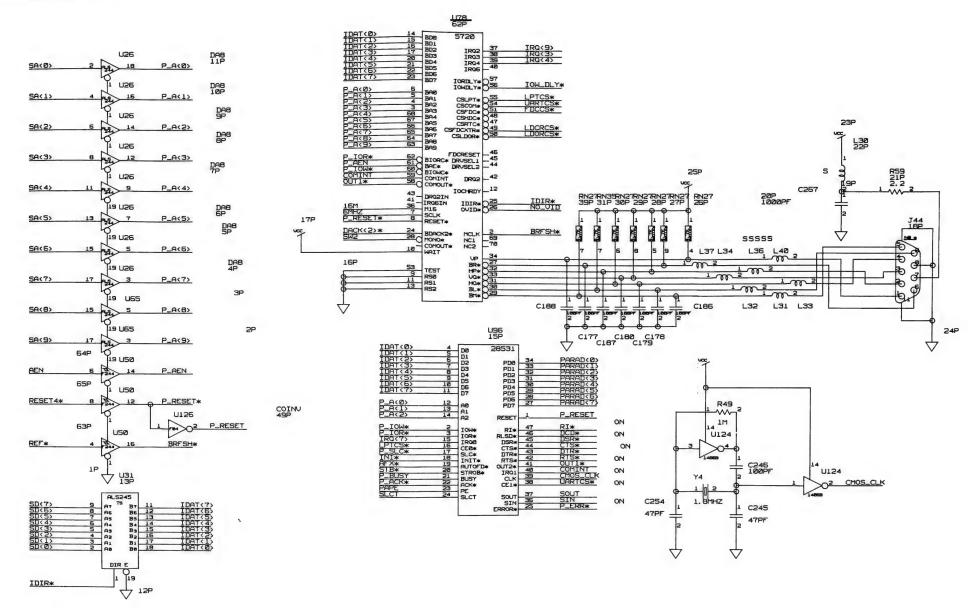

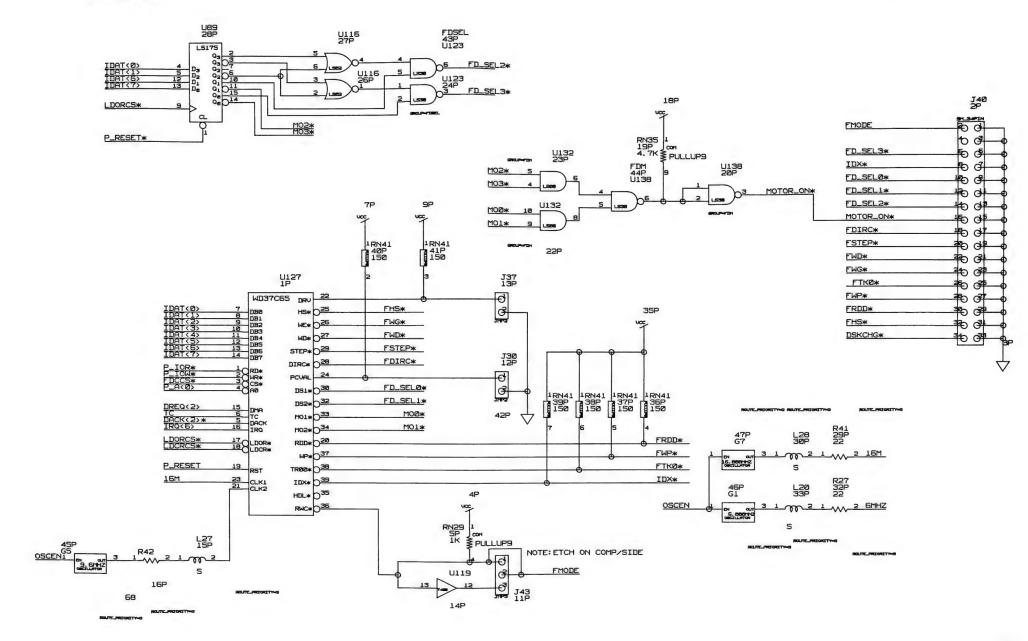


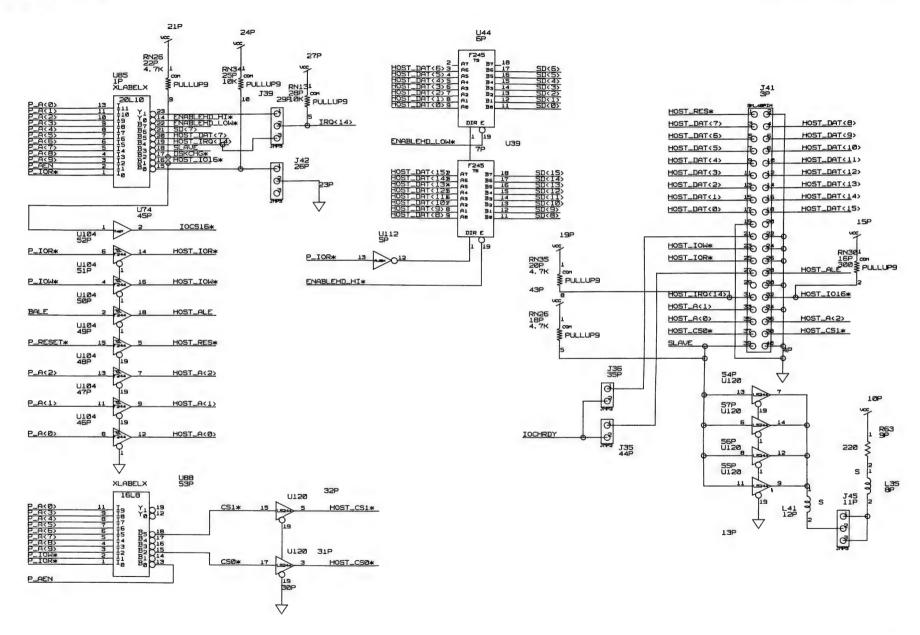


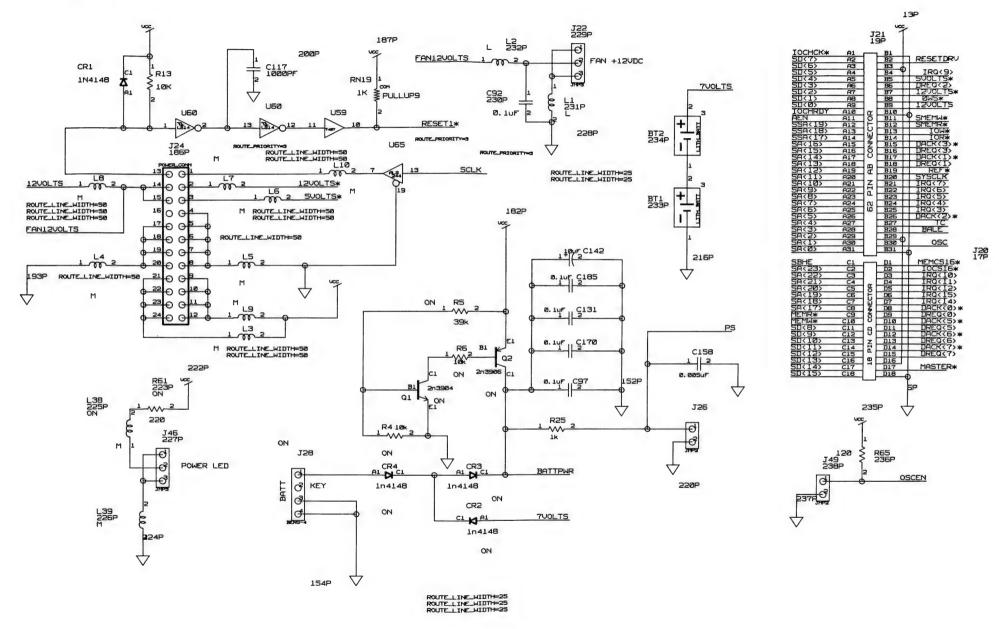

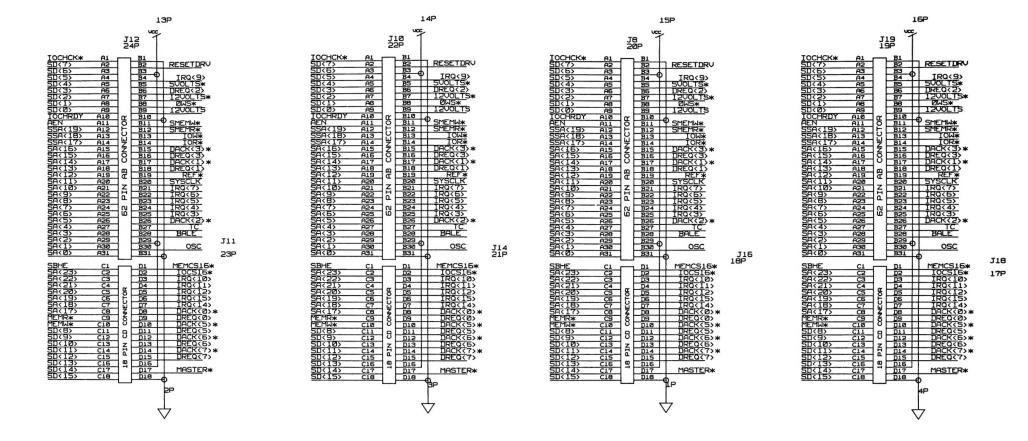

PC60-III SYSTEM SCHEMATICS

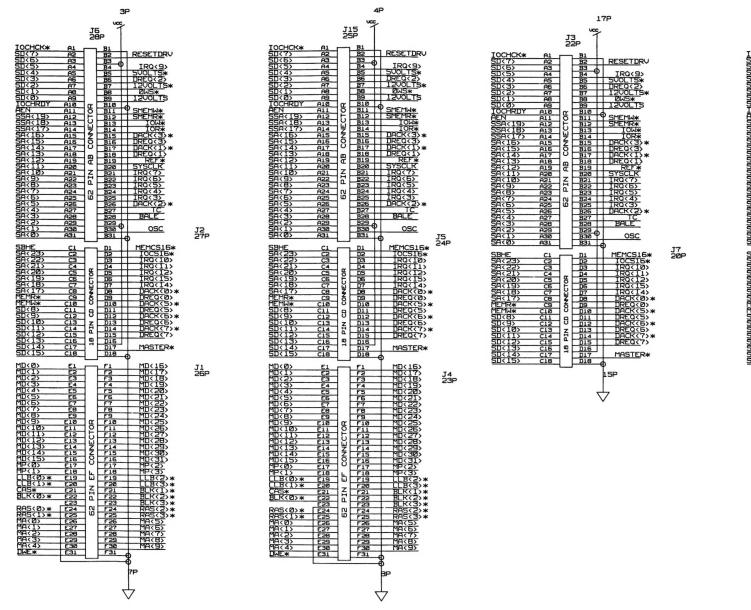

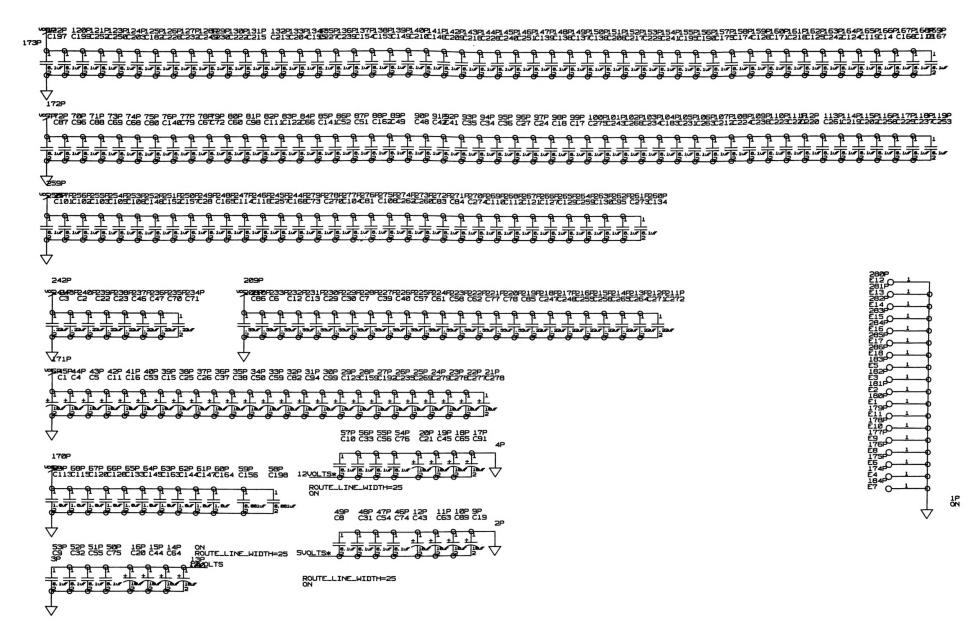



Computer Systems Division 1200 Wilson Drive West Chester, PA 19380